


OPERATING MANUAL

SJ519 TH

TELEHANDLER

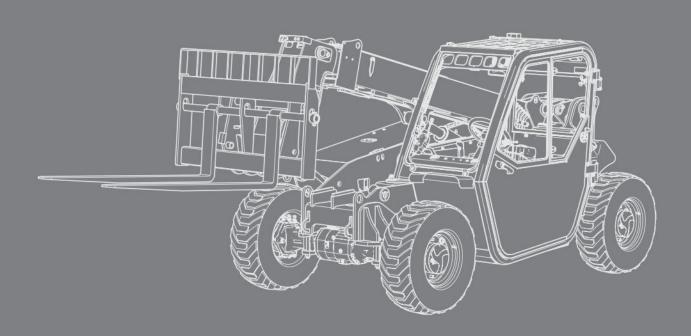

216939ADAJuly 2019
ANSI/CSA

This manual is based on Serial Number:

SJ519 TH: 875 000 00 & Above

Please refer to the website (www.skyjack.com) for contact information, other Serial Numbers, the most recent Technical Manuals and USB software.

Original instructions in English.

THIS SAFETY ALERT SYMBOL MEANS ATTENTION!



BE ALERT! YOUR SAFETY IS INVOLVED.

The Safety Alert Symbol identifies important safety messages on telehandlers, safety signs in manuals or elsewhere. When you see this symbol, be alert to the possibility of personal injury or death. Follow the instructions in the safety message.



DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



A CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

IMPORTANT

IMPORTANT indicates a procedure essential for safe operation and which, if not followed, may result in a malfunction or damage to the telehandler.

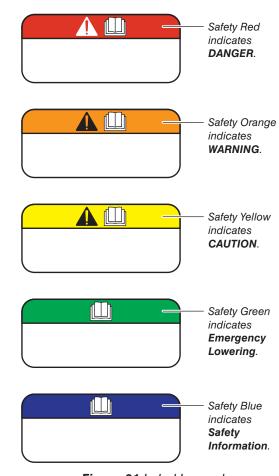


Figure 01 Label Legend

| Notes | | |
|-------|--|--|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

Table of Contents

| Sect | ion 1 – | About Your Telehandler | . 9 |
|------|---------|--------------------------------------|-----|
| 1.1 | Read a | and Heed | 9 |
| | 1.1-1 | Telehandler Definition | . 9 |
| | 1.1-2 | Purpose of Equipment | . 9 |
| | 1.1-3 | Use of Equipment | . 9 |
| | 1.1-4 | Manual | . 9 |
| | 1.1-5 | Operator | . 9 |
| | 1.1-6 | Service Policy and Warranty | . 9 |
| | 1.1-7 | Ownership of Machine | . 9 |
| | 1.1-8 | Optional Accessories | . 9 |
| | 1.1-9 | Scope of this Manual | 10 |
| 1.2 | Symbo | ols & Nomenclature | .11 |
| 1.3 | | ft Hand Signals | |
| 1.4 | | Assemblies | |
| 1.5 | | Number Nameplate | |
| 1.6 | Opera | tor's Responsibility for Maintenance | |
| | 1.6-1 | Maintenance and Inspection Schedule | |
| | 1.6-2 | Owner's Inspections | 13 |
| Sect | ion 2 – | Operator Safety | 15 |
| 2.1 | | ocution Hazard | |
| 2.2 | | Precautions | |
| 2.2 | - | ccess | |
| 2.4 | | te Inspection | |
| | | | |
| Sect | | Familiarization | |
| 3.1 | Comp | onent Identification | .22 |
| 3.2 | Manua | al Storage Box | .23 |
| 3.3 | Contro | ol Functions | .23 |
| | 3.3-1 | Operator's Cab Controls | 23 |
| | 3.3-2 | Multi-functional Joystick | 24 |
| | 3.3-3 | Operator's Cab Dash Controls | 25 |
| 3.4 | Safety | Features and Devices | .27 |
| | 3.4-1 | Reverse Alarm | 27 |
| | 3.4-2 | Parking Brake | 27 |
| | 3.4-3 | Operator's Cab | 27 |
| | 3.4-4 | Operator's Seat | 27 |
| | 3.4-5 | Frame Level | 28 |
| | | | |

| 3.5 | Option | al Equipment | 28 |
|------|-----------------|---|-----------|
| | 3.5-1 | Positive Air Shutoff Switch (If Equipped) | 28 |
| | 3.5-2 | Flashing Beacon (If Equipped) | 28 |
| | 3.5-3 | Road Lights, Boom Lights & Work Lights (If Equipped) | 28 |
| | 3.5-4 | Fire Extinguisher (If Equipped) | 28 |
| | 3.5-5 | Back-up Sensor with Display Buzzer (If Equipped) | 29 |
| | 3.5-6 | Back-up Sensor/Camera with Monitor (If Equipped) | 29 |
| | 3.5-7 | Tilt Steering Option (If Equipped) | 29 |
| 3.6 | Option | al Attachments | 30 |
| | 3.6-1 | Side Tilt Carriage | <u>30</u> |
| | 3.6-2 | Side Shift Carriage | <u>30</u> |
| | 3.6-3 | Block Forks | 31 |
| | 3.6-4 | Skid Steer Adapter | 31 |
| | 3.6-5 | Truss Boom | 32 |
| | 3.6-6 | Loader Bucket | 32 |
| Sact | ion 4 – | Pre-operation | 25 |
| 4.1 | | tor's Responsibility | |
| 4.1 | - | | |
| 4.2 | 4.2-1 | & Daily Maintenance Inspections | |
| | 4.2-1 4.2-2 | Electrical | |
| | 4.2-2 4.2-3 | Hydraulic | |
| | 4.2-3 4.2-4 | | |
| | | Cylinders | |
| | 4.2-5 | Mirrors | |
| | 4.2-6 | Frame | |
| | 4.2-7 | Engine Compartment | |
| | 4.2-8 4.2-9 | Boom. | |
| | 4.2-9 4.2-10 | Lifting Attachment | |
| | | Grease Points | |
| | | Operator's Cab | |
| 4.3 | | on Tests | |
| 4.3 | 4.3-1 | Test Starter Operation | |
| | 4.3-1 4.3-2 | Test Horn | |
| | 4.3-2 4.3-3 | Test Lights (If Equipped) | |
| | 4.3-3 4.3-4 | Test Boom Functions. | |
| | 4.3-4 4.3-5 | Test Attachment Functions | |
| | 4.3-5 4.3-6 | Test Accelerator Pedal | |
| | 4.3-0 4.3-7 | Test Reverse Alarm, Driving & Service Brake | |
| | 4.3-7 4.3-8 | Test Parking Brake | |
| | 4.3-8 4.3-9 | | |
| | | Test Book up Sepagravith Display Buzzer (If Equipped) | |
| | 4.3-10 | Test Book up Sensor With Display Buzzer (If Equipped) | |
| | 4.3-11 | Test Back-up Sensor/Camera with Monitor (If Equipped) | υC |

| 4.4 | Opera | tor's Checklist | 51 |
|-------|---------|---|----|
| Secti | ion 5 – | Operation | 53 |
| 5.1 | Startin | ng the Engine | 54 |
| 5.2 | Driving | g the Telehandler | 54 |
| | 5.2-1 | Driving on Level Terrain | 54 |
| | 5.2-2 | Driving on Slopes | 54 |
| 5.3 | Steerin | ng the Telehandler | 55 |
| | 5.3-1 | Four-wheel Steering | 55 |
| | 5.3-2 | Front Steering (Two-Wheel) | 55 |
| | 5.3-3 | Crab Steering | 55 |
| | 5.3-4 | Adjusting the Tilt Steering Wheel (If Equipped) | 55 |
| 5.4 | Opera | ting the Boom | 56 |
| | 5.4-1 | Raising or Lowering Boom | 56 |
| | 5.4-2 | Extending or Retracting Boom | 56 |
| 5.5 | Tilting | the Attachment | 56 |
| 5.6 | Handli | ing Loads | 56 |
| 5.7 | Handli | ing Loads at Ground Level | 57 |
| | 5.7-1 | Picking up a Load | 57 |
| | 5.7-2 | Transporting a Load | 57 |
| | 5.7-3 | Placing a Load | 57 |
| 5.8 | Handli | ing Loads at Variable Heights | 58 |
| | 5.8-1 | Picking up a Load | 58 |
| | 5.8-2 | Placing a Load | 58 |
| 5.9 | Parkin | g and Shutting Down the Telehandler | 58 |
| 5.10 | DEUTZ | Z Engine Data Display Module | 59 |
| | 5.10-1 | Function Buttons | 59 |
| | 5.10-2 | Contrast & Illumination Settings | 59 |
| | 5.10-3 | Engine Main Display | 59 |
| | 5.10-4 | Quad Display | 60 |
| | 5.10-5 | Graphic Display | 60 |
| | 5.10-6 | Error Messages | 60 |
| | 5.10-7 | Display Configuration | 61 |
| 5.11 | Use of | f the Capacity Charts | 62 |
| | | Maximum Load Capacity | |
| | | Examples on Reading the Capacity Chart | |
| 5.12 | Attach | ment Installation and Adjustment | 64 |
| | 5.12-1 | Installing Attachments Using the Quick Attach Feature | 64 |
| | | Removing Attachments Using the Quick Attach Feature | |
| | 5.12-3 | Installing Attachments Using the Hydraulic Quick Attach Feature (If Equipped) | 65 |
| | 5.12-4 | Removing Attachments Using the Hydraulic Quick Attach Feature (If Equipped) | 65 |
| | | Adjusting Forks | |
| | 5.12-6 | Changing Forks | 66 |

| 5.13 | Slinging Loads | 67 |
|------------|--|----|
| 5.14 | Third-Party Attachments | 67 |
| Secti | ion 6 – Procedures | 69 |
| 6.1 | Refueling Procedure | 69 |
| | 6.1-1 Diesel Fuel | 69 |
| 6.2 | Lifting SJ519 TH | 70 |
| 6.3 | Loading, Tie-downs and Transporting | 71 |
| 6.4 | Towing the Telehandler | 72 |
| 6.5 | Using the Telehandler as a Tow Vehicle | 73 |
| | 6.5-1 Rear Hitch | 73 |
| Secti | ion 7 – Specifications | 75 |
| 7.1 | Standard and Optional Equipment | 76 |
| 7.2 | Specifications and Features | 77 |
| 7.3 | Tire/Wheel Specifications | 78 |
| 7.4 | Recommended Fluids/Lubrications | 79 |
| Secti | ion 8 – Labels | 81 |
| 8.1 | Model SJ519 TH. | 82 |
| Secti | ion 9 – Unique Skylack Features | 97 |

Section 1 – About Your Telehandler

1.1 Read and Heed

Skyjack is continuously improving and expanding product features on its equipment, therefore, specifications and dimensions are subject to change without notice.

1.1-1 Telehandler Definition

A material handler designed primarily as a fork truck with a pivoting telescopic boom which enables it to pick and place loads at distances as well as various lift heights.

1.1-2 Purpose of Equipment

The Skyjack telehandlers are designed to lift, handle and transport agricultural or industrial products by means of specific attachments.

1.1-3 Use of Equipment

The telehandler is a highly maneuverable variable reach rough terrain forklift (RTFL). Lifting, handling and driving must be on a flat, level, compacted surface. It can be driven over uneven terrain only when the boom is fully lowered.

1.1-4 Manual

The operating manual is considered a fundamental part of the telehandler. It is a very important way to communicate necessary safety information to users and operators. A complete and legible copy of this manual must be kept in the provided weather-resistant storage compartment on the telehandler at all times.

1.1-5 Operator

The operator must read and completely understand both this operating manual and the hazard identification label located in the cab of the telehandler and all other warnings in this manual and on the telehandler. Compare the labels on the telehandler with the labels found within this manual. If any labels are damaged or missing, replace them immediately.

Only trained and authorized personnel shall be permitted to operate the telehandler.

The operator must be familiar with employer's work rules and related government regulations and be able to demonstrate the ability to understand and operate this make and model of telehandler in the presence of a qualified person.

1.1-6 Service Policy and Warranty

Skyjack warrants each new product to be free of defective parts and workmanship for the first 2 years or 3000 hours, whichever occurs first. Any defective part will be replaced or repaired by your local Skyjack dealer at no charge for parts or labor. In addition, all products have a 5 year structural warranty. Contact the Skyjack Service Department for warranty statement extensions or exclusions.

1.1-7 Ownership of Machine

Notify Skyjack of machine ownership. If you have sold or transferred any machine, promptly notify Skyjack of new owner's contact information.

1.1-8 Optional Accessories

The Skyjack telehandler is designed to accept a variety of optional accessories. These are listed under *Section 3.6*. Operating instructions for these options (if equipped) are located in *Section 5 – Operation* of this manual.

For non-standard components or systems, contact the Skyjack Service Department at:

☎: 800 275-9522 ♣: 630 262-0006

Include the model and serial number for each applicable telehandler.


1.1-9 Scope of this Manual

- **1.** This manual applies to the ANSI/ITSDF and CSA versions of the SJ519 TH telehandlers.
 - Equipment identified with "ANSI" meets the ANSI/ITSDF B56.6-2016 standard.
 - Equipment identified with "CSA" meets the CSA B335-15 standard.
- 2. CSA (Canada): Operators are required to conform to national, territorial/provincial and local health and safety regulations applicable to the operation of this telehandler.
- 3. ANSI/ITSDF (United States): Operators are required by the current ANSI standards to conform to national, territorial/provincial and local health and safety regulations applicable to the operation of this telehandler.


1.2 Symbols & Nomenclature

| Symbol | Description | Symbol | Description |
|--------|----------------------------|---|---|
| | Diesel Fuel Fuel Tank | $\triangleright \bigcirc\!$ | Engine Oil Level |
| 3 | Engine Air Intake | | Hydraulic Oil |
| | Engine Coolant | $\triangleright \boxed{\Diamond}$ | Hydraulic Oil Level |
| b₩ | Engine Coolant Level | * | Positive Air Shutoff (Engine high idle) |
| | Drain Water/Fuel Separator | \bigcirc | Engine Oil |

1.3 Forklift Hand Signals

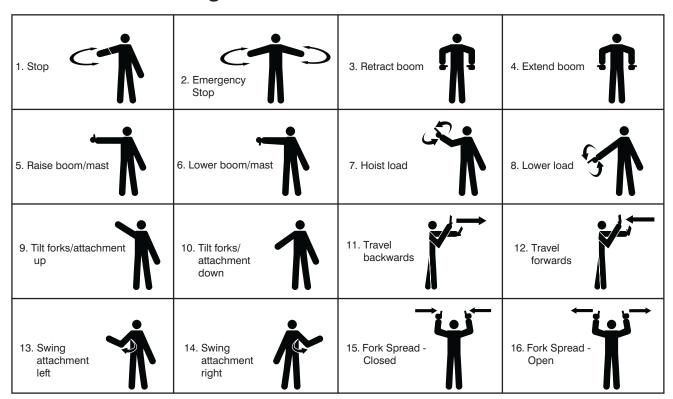

SJ519 TH
SKYJACK

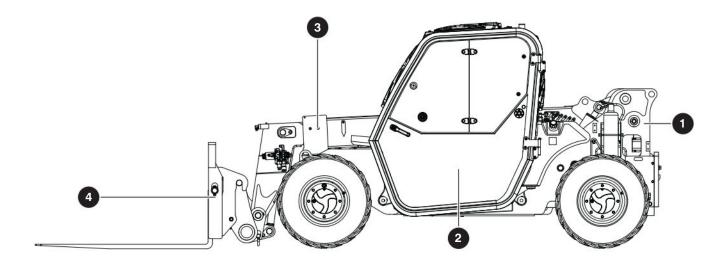

1.4 Major Assemblies

The telehandler consists of four major assemblies: the frame, boom assembly, attachment and cab.

- Frame: The frame is a one-piece weldment that supports the boom assembly. The parking brake is integral with the axle and is located in the front axle.
- Cab: The cab is the safety structure enclosing the operator. It also furnishes the controls of the telehandler.
- 3 Boom Assembly: The boom is mounted on the frame and consists of telescoping boom sections. SJ519 TH telehandlers have a main boom and a fly boom. The telehandler is equipped with a carriage tilt cylinder, which is mounted to the inside of the jib. The quick attachment is mounted to the jib and is supported by the tilt cylinder.
- Attachment: The attachment is a materialhandling device attached to the boom. The standard attachment is a fork-carriage attachment. Refer to Section 3.6 for various optional attachments.

1.5 Serial Number Nameplate

The **serial number nameplate 5**, located at the front left side of telehandler lists the following:

- Model number
- Serial number
- Maximum capacity
- Maximum lift height
- Maximum machine weight without attachment
- Original supplied attachments
- Year of manufacture
- Voltage

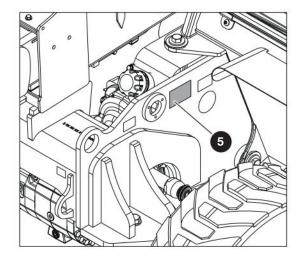


Figure 02 Serial Number Nameplate location

1.6 **Operator's Responsibility** for Maintenance

WARNING

Maintenance must be performed by trained and competent personnel who are familiar with mechanical procedures.

Death or serious injury could result from the use of a telehandler that is not properly maintained or kept in good working condition.

The operator must be sure that the telehandler has been properly maintained and inspected before using it.

The operator must perform all the daily inspections and function tests found on the Operator's Checklist (see Section 4.4), even if the operator is not directly responsible for the maintenance of this telehandler.

1.6-1 Maintenance and Inspection Schedule

Refer to Service manual for quarterly (or 250 hours) and annual inspection details.

The actual operating environment of the telehandler may affect the maintenance schedule.



WARNING

Use original or manufacturer-approved parts and components for the telehandler.



NOTE

Refer to Skyjack's website www.skyjack.com for the latest service bulletins prior to performing frequent/ periodic or annual inspections.

1.6-2 Owner's Inspections

It is the responsibility of the owner and/or operator to arrange daily, quarterly (or 250 hours) and annual inspections of the telehandler. Refer to the Service manual for recommended maintenance and inspection areas and intervals.

SJ519 TH SKYJACK

| Notes | |
|-------|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Section 2 – Operator Safety

WARNING

Failure to comply with your required responsibilities in the use and operation of the telehandler could result in death or serious injury!

A study conducted by St. Paul Travelers showed that most accidents are caused by the failure of the operator to follow simple and fundamental safety rules and precautions.

You, as a careful operator, are the best insurance against an accident. Therefore, proper usage of this telehandler is mandatory. The following pages of this manual should be read and understood completely before operating the telehandler.

Common sense dictates the use of protective clothing when working on or near machinery. Use appropriate safety devices to protect your eyes, ears, hands, feet and body.

Any modifications from the original design are strictly forbidden without written permission from Skyjack.

2.1 **Electrocution Hazard**

This telehandler is not electrically insulated. Use extreme caution around high-voltage overhead power lines and parts. Maintain a Minimum Safe Approach Distance (MSAD) of 10 ft from sources of power (Figure 03). If the work requires to be closer than 10 ft, stop and consult a qualified person with respect to electrical transmission and distribution to have appropriate measures taken.

Adhere to all federal/national, state/provincial, or local safety regulations for your own protection.

No part of telehandler or payload must be brought closer to any energized overhead electrical conductor with nominal phase voltage rating as specified below.

| Minimum Safe Approach Distance | | |
|--------------------------------|---|--|
| Voltage Range | Minimum Safe Approach Distance | |
| ≤ 50 KVA | 3 m (10 ft) | |
| > 50 KVA | Stop and consult a qualified person with respect to electrical transmission and distribution to have appropriate measures taken | |

FAILURE TO AVOID THIS HAZARD WILL RESULT IN DEATH **OR SERIOUS INJURY**

Figure 03 Minimum Safe Approach Distance



DANGER

Never approach any power line with any part of telehandler. Use extreme caution; serious injury or death can result with contact from any power line.

IMPORTANT

Always assume electrical power sources and overhead lines are energized.



MAINTAIN a Minimum Safe Approach Distance from sources of high-voltage power.



DO NOT operate telehandler during lightning or storms. Take into account the effects of weather (e.g., wind, rain and snow) on the safe operation of the rough terrain forklift truck.



WARNING

Do not use the telehandler as a ground for welding.

S.1519 TH

Section 2 – Operator Safety Safety Precautions

2.2 Safety Precautions

Know and understand the safety precautions before going on to next section.



WARNING

DO NOT operate this telehandler without proper authorization and training. Failure to avoid this hazard could result in death or serious injury.



WARNING

Failure to heed the following safety precautions could result in tip over, falling, crushing, or other hazards leading to death or serious injury.

MAKE SURE all DANGER, WARNING, CAUTION and INSTRUCTIONAL DECALS are in place and can be read. Clean or replace decals as required.

KNOW all national, state/provincial and local rules which apply to your telehandler and jobsite.

WEAR all the protective clothing and personal safety devices issued to you or called for by job conditions.



DO NOT wear loose clothing, dangling neckties, scarves, rings, wristwatches or other jewelry while operating this telehandler.



DO NOT use this telehandler under influence of alcohol or drugs, or if operator's performance is impaired by a medical condition, the influence of prescription or over the counter drugs, or fatigue.



DO NOT climb on this vehicle for any reason.



DO NOT stand on forks. Failure to heed could result in death or serious injury.



DO NOT use carriage or any other portion of the boom for slinging loads unless on a manufacturer's approved attachment point that is supplied with the machine.



DO NOT elevate the boom in windy or gusty conditions.



DO NOT drive with boom elevated.



DO NOT operate on surfaces not capable of holding the weight of the telehandler; including the rated load (e.g., covers, drains, and trenches).



DO NOT maneuver a load while moving. This greatly increases the chance of spills and injury.



DO NOT enter the danger area under or around the boom when forks are off the ground or while engine is running.

Safety Precautions Section 2 – Operator Safety



DO NOT lower the boom unless the area below is clear of personnel and obstruction.



BE AWARE of all obstructions while traveling.



DO NOT elevate the boom while the telehandler is on a truck, forklift or other device or vehicle.



USE CAUTION when boom is fully extended. The further out the boom is extended, the less load telehandler can support.



ENSURE that there are no personnel or obstructions in the path of travel, including blind spots.

BE AWARE of blind spots when operating the telehandler.



USE CAUTION when placing loads at high elevations and on downhill slopes.



ALWAYS keep head, arms, hands, legs and all other body parts inside the operator's cab. Never put any part of the body between any moving component and another obstacle including but not limited to: the load handling structure; the reach mechanism; the rough terrain forklift truck attachment



IF OPERATION IN AREAS WITH HOLES OR DROP-OFFS IS ABSOLUTELY NECESSARY, ensure that all four wheels have contact with firm surface. After boom elevation, the drive function must not be activated.



AVOID jerks and sudden stops.



TRAVEL SLOWLY over rough terrain.



AVOID entanglement with ropes, cords or hoses.



KNOW the weight of the load you are transporting. Never lift more than the lifting capacity at any given extension or elevation of the boom as listed on the capacity charts.



CHECK for cracks and signs of stress.

Section 2 – Operator Safety Safety Precautions



BE AWARE of the telehandler's travel envelope, especially when turning. Keep sufficient clearance at all times between the telehandler and any obstacles or people.



WALK AROUND the telehandler before operation and check for any visible signs of damage or malfunction.



ALWAYS maintain three points of contact when entering vehicle. Use provided hand-holds and steps only.



CHECK for clearance before traveling between obstacles.



ALWAYS wear your seat belt when operating this vehicle.



DRIVE DOWNHILL UNLOADED. Without a load, the back end is the heaviest part of the telehandler. Driving downhill decreases potential for tip-over.



DRIVE UPHILL LOADEDWhen holding a load, driving uphill decreases potential for load to slip out.



WHEN TRANSPORTING
LOADS fully retract the boom,
keep the load low to the ground
and forks tilted back slightly.
This is the most stable position
possible for the vehicle.



KEEP forks close to the ground when in motion to increase telehandler stability and decrease potential for injury to others. When fully stopped, lower forks completely to the ground.



TILT forks backward slightly when traveling to decrease potential of load slipping off.



SECURE loose loads with chains or straps to decrease potential of spills or injury to others.



TETHER LOADS that may swing, keeping them close to the ground. Provide ample clearance for personnel to guide the load safely.



SLINGING LOADS is acceptable only when the load is appropriately attached to the lifting hook, a jib boom or the heel of a tilted fork, and the precautions outlined in *Section* 5.13 are followed.

Safety Precautions Section 2 – Operator Safety



KEEP OTHERS AWAY at all times during operation.



CHECK lights for proper function before operating.



ENSURE ALL tires are in good condition and lug nuts are properly tightened.

DO NOT alter or disable safety devices.

DO NOT burn or drill holes in forks. Modifying any part of telehandler or attachment affects its capacity and/or stability.

DO NOT try to start the telehandler by pushing or towing. Such operation may cause severe damage to the transmission (refer to *Section 5 – Operation*).

IF DRIVING ON ROADS OPEN TO PUBLIC TRAFFIC respect the local regulations.

THE OPERATOR'S CAB provides a falling object protection structure (FOPS) and a rollover protection structure (ROPS). Do not make any modification to this structure. If damaged, the cab cannot be repaired. It must be replaced.

STUNT driving and horseplay are prohibited.

ALWAYS USE FRONT steering when traveling at high speeds; i.e. on highways and public roads.

DO NOT change steering mode while the telehandler is traveling. Change the steering mode only when telehandler is stopped.

ALWAYS look in the direction of travel. Reduce speed and be especially careful when traveling in reverse and/or turning. Bring the telehandler to a complete stop before changing the direction of travel.

STAY CLEAR of pinch points and rotating parts on the material handler. Getting caught in a pinch point or a moving part can cause serious injury or death.

Before performing any maintenance on telehandler, follow the shutdown procedure on *Section 5.9*.

DO NOT position the telehandler against another object to steady the load.

DO NOT operate on slippery surfaces not capable of providing adequate traction to stop, drive or steer the telehandler.

SHUT DOWN by positioning the telehandler in a safe location. Lower boom to ground, apply the park brake, move all controls to neutral and allow engine to idle for 3 to 5 minutes. Stop engine and remove ignition key to prevent unauthorized use.



WARNING

Always move all controls to neutral, press the park brake switch (P) to on position. and shut off engine before exiting the operator's cab.

19

SJ519 TH 216939ADA

Cab Access Section 2 - Operator Safety

2.3 Cab Access



WARNING

Entering and exiting the telehandler should only be done using the three points of contact.

Use three points of contact to enter and exit the cab. Face the telehandler when entering or exiting the cab.

Three points of contact means that two hands and one foot or one hand and two feet are in contact with the telehandler or the ground at all times during entering and exiting.



WARNING

Operator should not use any telehandler that:

- does not appear to be working properly.
- has been damaged or appears to have worn or missing parts.
- has alterations or modifications not approved by the manufacturer.
- has safety devices which have been altered or disabled.
- has been tagged or locked out for non-use or repair.
- bears an unapproved attachment.

Failure to avoid these hazards could result in death or serious injury.



NOTE

Improper operation, faulty maintenance, or poor housekeeping may contribute to a condition of instability

Jobsite Inspection 2.4

Be sure to follow all local, provincial/territorial/state and national regulations related to operating variable reach rough terrain forklifts (RTFLs). Do not use the telehandler in hazardous locations.

Always monitor the workplace for changing conditions that could create potentially hazardous situations.

The storage and handling of liquid fuels and liquefied petroleum gas fuel used in RTFL shall be in accordance with NFPA 505, NFPA 30 and NFPA 58 as applicable. The user needs to determine the hazard classification of any particular atmosphere or location according to ANSI/NFPA 505. In addition, rough terrain forklift trucks operated in hazardous areas shall be approved and of the type required by ANSI/ NFPA 505.

Perform a thorough job site inspection prior and during the operation of the telehandler to identify potential hazards in your work area.

It is the responsibility of the operator to perform a job site inspection and avoid the following hazardous situations:

- holes or drop-offs
- ditches or soft fills
- floor obstructions, bumps or debris
- overhead obstructions
- electrical cords, hoses and high voltage conductors
- hazardous locations
- inadequate surface support to withstand all load forces imposed by the telehandler
- wind and weather conditions
- the presence of unauthorized personnel
- other possible unsafe conditions

Section 3 – Familiarization



WARNING

Do not operate this telehandler without proper authorization and training. Failure to avoid this hazard could result in death or serious injury.




WARNING


It is the responsibility of the operator to read, completely understand and follow all instructions and warnings contained in this operating manual and on the telehandler.



3.1 Component Identification

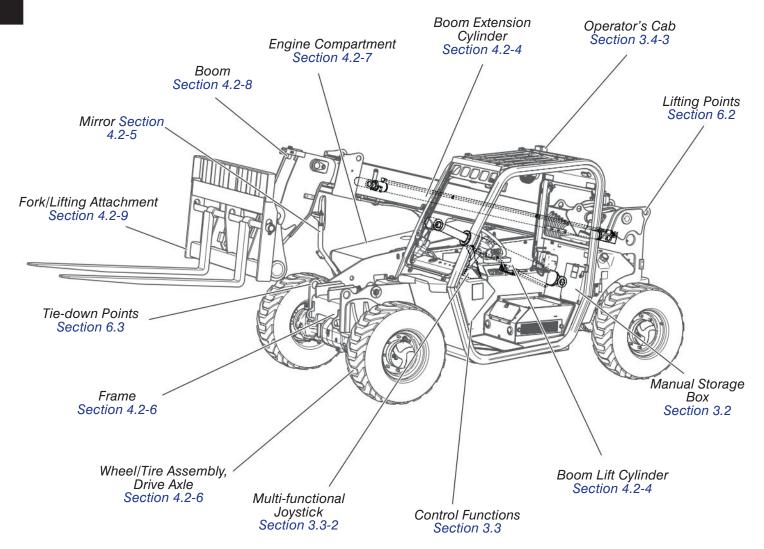

Section 3 - Familiarization

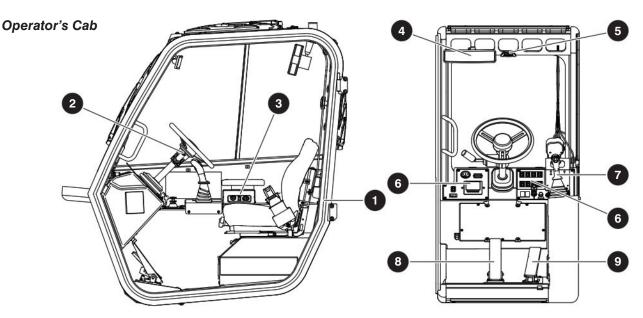

3.2 Manual Storage Box

This weather-resistant box is mounted at the back of the operator's seat 1. It contains the operating manual and other important documentation. The operating manual for this make and model of telehandler must remain with the telehandler and should be stored in this box.

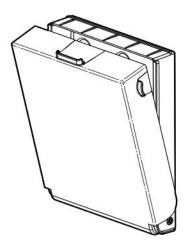


Figure 04 Manual Storage Box


3.3 Control Functions


3.3-1 Operator's Cab Controls

- 2 Steering Wheel: Turn the steering wheel to the left or right to steer the telehandler in the corresponding direction. Three steering modes are available (refer to Section 5.3).
- 3 Cab Heater and Air Conditioner Controls (If Equipped): A switch and two knobs to adjust the temperature inside the cab.
- Rear View Mirror: Allows the operator to check the surrounding area behind telehandler.
- **5 Level Indicator:** Located on the upper cross member of the overhead guard. When the ball is centred in the indicator, this indicates that telehandler frame is level.
- Front Dash: Location of controls essential to the operation of the telehandler (refer to Section 3.3-3 for details).
- Multi-functional Joystick: A control allowing the operator to control boom and attachment operation (refer to Section 3.3-2 for details).
- Service Brake Pedal: The service brake is foot operated and is used to decrease speed or stop.
- Accelerator Pedal: Press pedal to increase speed and release pedal to decrease speed.

Section 3 – Familiarization Control Functions

Multi-functional Joystick

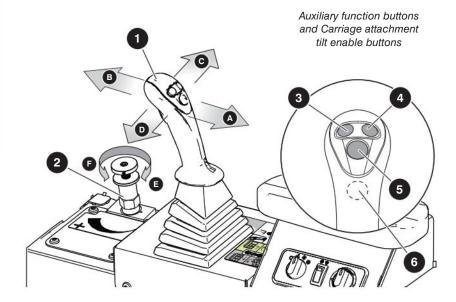

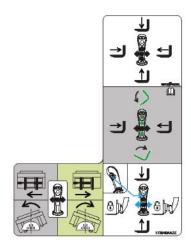

3.3-2 Multi-functional Joystick

This dual-axis joystick is a multi-functional control that allows boom operation (extend or retract and up or down), fork tilt, and auxiliary functions such as carriage side tilt or carriage swing. The joystick returns to neutral position when released. It includes the following additional controls:

Joystick

- Raise the boom by moving joystick backward.
- Extend the boom by moving the joystick to the right.
- Retract the boom D by moving the joystick to the left.

2 Attachment Hydraulic Flow Control

- Increase the flow of hydraulic fluid through the attachment by turning the Attachment Hydraulic Flow Control clockwise.
- Decrease the flow by turning it counterclockwise.

3 Left Auxiliary Function Button

 Left auxiliary function is operated by pressing and holding the left button.

Right Auxiliary Function Button

Not Used.

5 Carriage Attachment Tilt Enable Button

- Tilt attachment forward by pressing and holding carriage attachment tilt enable button and moving joystick forward .
- Tilt attachment backwards by pressing and holding carriage attachment tilt enable button
 and moving the joystick backward

Trigger Auxiliary Function Button

- Lock the hydraulic quick attach by pressing the trigger auxiliary function button and moving the joystick to the left.
- Unlock the hydraulic quick attach by pressing the trigger auxiliary function button and moving the joystick to the right.




NOTE

The right joystick button is not functional on SJ519 TH telehandlers.

For operational controls of each attachment, see *Section 3.6*.

SJ519 TH SKYJACK

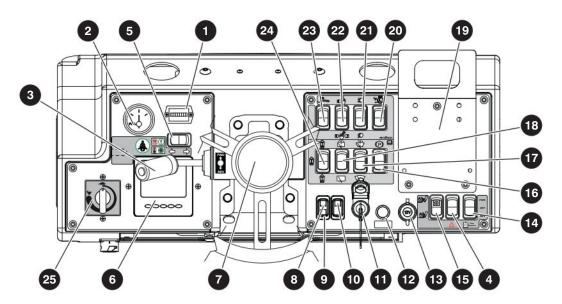

3.3-3 Operator's Cab Dash Controls


- **1** Hourmeter: This gauge records accumulated operating time of the telehandler.
- Fuel Gauge: Indicates the amount of fuel in the fuel tank. Fill the tank with ultra low sulfur diesel fuel only when the indicator needle moves below the 1/4 tank mark.
- Oirection Control Lever: This lever allows forward or reverse travel. The center position is neutral. To select forward travel, lift from lock position and move the direction control lever to the FWD position; for reverse travel move lever to REV.
- Hazard Warning Light Switch (If Equipped): The hazard warning light switch activates all four turn signals to indicate an emergency situation.
- **5** Left and Right Turn Signals Switch (If Equipped): This rocker switch controls left and right turn signals located on both the front and rear of the telehandler.
- 6 Engine Data Display Module: Allows the operator to select the required engine data such as engine RPM, engine temperature, voltage, and visualize it in the following formats:
 - Analogue display
 - Digital data
 - Graphics
 - Multi-data (a combination of the above)
 - Current alarm messages

(Refer to Section 5.10 for details).

- Telephandler in the corresponding direction. Three steering modes are available (refer to Section 5.3).
- Glow Plug Indicator: This light illuminates until glow plugs have completed their timed cycle. When the lamp goes out, the engine is ready to be started.
- Hydraulic Oil Temperature Indicator: This red light indicator illuminates when the hydraulic oil temperature is outside normal operating range.
- Positive Air Shut-off Valve Indicator (If Equipped): Illuminates red for a few seconds when testing the functionality of positive air shutoff valve.
- **10** Ignition Switch: This is a three position, antirestart switch.
 - When in OFF position, it turns the engine off and key can be removed.
 - When in ON position, it provides power to ignition and auxiliary circuits.
 - When in START position, it starts the engine; when released, key returns to ON position.
- **12 Horn Button:** When depressed, the horn button activates an audible warning.
- 12 Volt Power Port: A convenient 12 Volt power port is located on the dashboard.
- Attachment Hydraulic Flow Switch: Turns hydraulic fluid flow to the attachment on and off.



Section 3 – Familiarization Control Functions

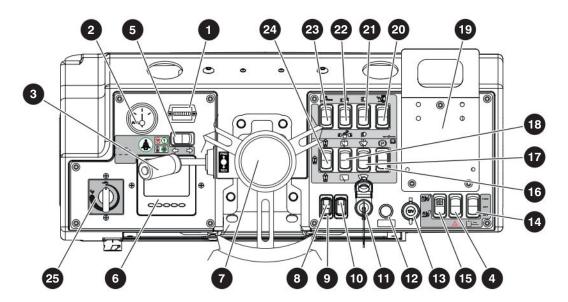

- **15 Hydraulic Quick Attach Switch (If Equipped):** Opens and closes the hydraulic quick attach function (see *Section 5.12-3*).
- **16 Park Brake Switch/Indicator:** This switch controls the spring applied, hydraulically released parking brake. Apply the parking brake by pressing the switch at the end marked (P) when the engine is running. When the brake is on, the red warning light illuminates.
- Tront and Top Windshield Wiper/Washer
 Switch (If Equipped): This switch
 activates the wiper and the washer for the front
 and top windshields. Press top portion to activate
 washer/wiper. Press bottom portion to activate
 wiper.
- (If Equipped): This switch activates the wiper and the washer for the rear windshield. Press top portion to activate washer/wiper. Press bottom portion to activate wiper.
- Capacity Charts: This set of charts indicates operating limits specific to the telehandler model and attachments. Refer to Section 5.11.
- Positive Air Shutoff Valve Test Switch (If Equipped): This switch is used for testing the functionality of the positive air shut-off valve. It allows the operator to shut off the air supply to the engine if the engine continues running after the main power is shut down. (Refer to Section 3.5-1). The indicator light Illuminates red for a few seconds when testing the functionality of positive air shut-off valve.

- 2 Road Lights Switch (If Equipped) : This switch activates the front headlights and rear tail lights.
- 2 Work Lights Switch (If Equipped) : This switch activates the front and rear work lights located on top of operator's cab.
- Boom Lights Switch (If Equipped) : The boom light switch controls the light at the end of the boom.
- 24 Steer Mode Switch: This switch has three positions to allow selection of four-wheel steer, front steer and crab steer.
- 43 Hydrostatic Pump Speed Control (If Equipped): This knob controls the speed of the hydrostatic pump.

Safety Features and 3.4 **Devices**


3.4-1 Reverse Alarm

The alarm produces an audible sound when REV is selected on the direction control lever.

3.4-2 Parking Brake

This spring-applied, hydraulically-released brake is activated by pressing the park brake switch on the dash. It must be applied when parking the machine or in an emergency. In the event of hydraulic pressure loss the parking brake will automatically activate.

3.4-3 Operator's Cab

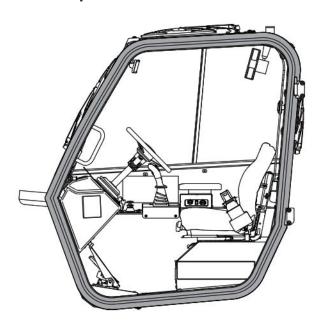

The operator's cab allows vision from all sides and is equipped with a falling object protection structure (FOPS) and a rollover protection structure (ROPS).

WARNING

Do not make any modification to FOPS or ROPS structures. If damaged, the cab cannot be repaired. It must be replaced.

A fully-enclosed cab with windows and door is available as an option. Included in this option are the windshield wiper(s), interior light and air heater/ defroster. Air conditioner is also available as an option for fully enclosed cab.

3.4-4 Operator's Seat



1 Seat Belt: The operator's seat is equipped with a seat belt. Use this seat belt at all times when operating telehandler.

WARNING

The seat belt must be worn at all times.

- 2 Seat: The telehandler seat is equipped with devices which allow for the adjustment of seat ride smoothness and distance from the controls. Adjust the seat so that foot pedals, steering wheel and instrument panel controls are within easy reach of the operator.
- Tore and Aft Lock Lever: This lever is located on the left side of the seat. Pushing the lever to the left unlocks the seat, allowing fore and aft adjustment.
- 4 Ride Control (If Equipped): The ride control is located at the front of the seat and is operated by means of a rotary knob. Clockwise rotation decreases the firmness while counterclockwise rotation increases the firmness.

Section 3 – Familiarization Optional Equipment

3.4-5 Frame Level

The frame level indicator, mounted above the windshield in the operator's cab, displays the current frame level measurement.

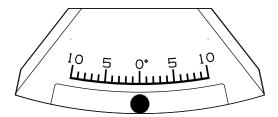 


Figure 05 Frame Level Indicator

3.5 Optional Equipment

The following descriptions are for identification, explanation and locating purposes only.

3.5-1 Positive Air Shutoff Switch (If Equipped)

This system provides emergency over-speed shutdown protection for the engine. The engine will shut down and a red indicator light on the dash will illuminate for a few seconds.

When red indicator light is illuminated, telehandler will have no power and engine will not turn on.

3.5-2 Flashing Beacon (If Equipped)

The flashing beacon is located on top of the operator's cab. This light is operational when key is in on | position.

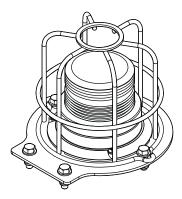


Figure 06 Flashing Beacon

3.5-3 Road Lights, Boom Lights & Work Lights (If Equipped)

The boom lights are mounted at the front of the main boom section.

The work lights are mounted on the frame as well as on top of the operator's cab.

The road lights (front headlights and taillights) have 2 settings; high beam and low beam headlights.

3.5-4 Fire Extinguisher (If Equipped)

The fire extinguisher is mounted to the frame at the rear left side of the telehander, beside the engine air intake access door.

3.5-5 Back-up Sensor with Display Buzzer (If Equipped)

The back-up display buzzer is mounted to the dash inside the cab and warns the operator of objects behind the telehandler. When an object is detected, the buzzer beeps continuously and the **range indicator lights** 1 illuminate. As objects become closer, beeping increases in frequency and more range indicator lights illuminate.

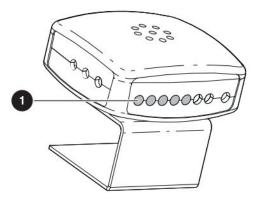


Figure 07 Back-up Display Buzzer

• Range Indicator Lights: These lights illuminate from left to right to indicate a relative distance to the closest detected object.

3.5-6 Back-up Sensor/Camera with Monitor (If Equipped)

The back-up monitor is mounted on the dash inside the cab and operational when the key switch is in on position. When active, the monitor displays the area behind the telehandler. A green **status symbol** 3 indicates the sensor and camera are connected and no objects are detected.

When in reverse and objects are detected, the monitor beeps, the status symbol turns red, and **range symbols** 2 indicate distance to the objects. As objects become closer the range symbols increase in number and change to red. Five symbols indicate immediate proximity.

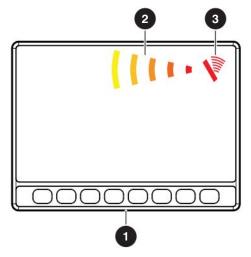


Figure 08 Back-up Monitor and Symbols

- Back-up Monitor
- 2 Range Indicator symbols
- 3 Sensor/Camera status symbol

3.5-7 Tilt Steering Option (If Equipped)

The tilt steering option allows the angle of the steering wheel to be adjusted (refer to *Section 5.7-1*).

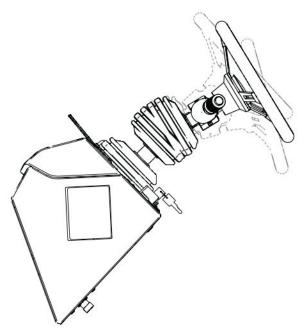


Figure 09 Tilt Steering Option

Section 3 – Familiarization Optional Attachments

3.6 Optional Attachments

The Skyjack TH series telehandler is designed to accept a variety of optional **Quick Attach** attachments aside from regular fork carriage attachment.

3.6-1 Side Tilt Carriage

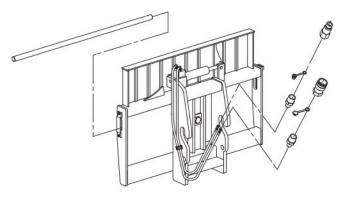


Figure 10 Side Tilt Carriage

The side tilt carriage allows carriage to tilt to either side.

Installation Procedure

1. Remove fork attachment or other attachment from boom and connect side tilt carriage attachment (refer to Section 5.12-1 and Section 5.12-2).

Operation

- 1. Make sure the side tilt carriage attachment is positioned perpendicular to the load, and that the load is centered with the carriage.
- 2. To tilt the carriage left, hold the left auxiliary function button down. To tilt the carriage right, hold right auxiliary function button down.
- **3.** Handle the load in the same way as a regular fork carriage attachment (refer to Section 5.7 and Section 5.8).

3.6-2 Side Shift Carriage

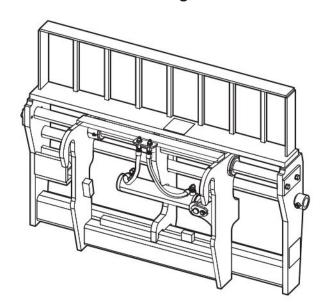


Figure 11 Side Shift Carriage

This attachment enables the entire carriage to be hydraulically shifted from side to side.

Installation Procedure

- 1. Remove fork attachment or other attachment from boom and connect side shift carriage attachment (refer to Section 5.12-1 and Section 5.12-2).
- 2. Connect auxiliary hydraulic hoses to the side shift cylinder.

Operation

- **1.** Make sure the side tilt carriage attachment is positioned perpendicular to the load.
- **2.** To shift the carriage left, hold left auxiliary function button down. To shift the carriage right, hold right auxiliary function button down.
- **3.** Before traveling, center the attachment to the sub-carriage and make sure the load is centered with the carriage. Handle the load in the same way as a regular fork carriage attachment (refer to Section 5.7 and Section 5.8).

SKYJACK

3.6-3 Block Forks

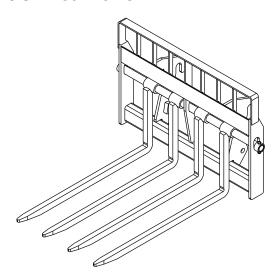


Figure 12 Block Forks

The block forks are used primarily to load/unload and place cubes of concrete or cement blocks. Block forks are designed to be accepted on all carriages provided they are equidistant.

Installation Procedure

1. Refer to Section 5.12-6 to change the forks.

IMPORTANT

Make sure the forks are equally spaced.

Operation

- 1. Using optional attachment controller, make sure the carriage attachment and forks are positioned perpendicular to the load, and that the load is centered with the carriage.
- 2. Handle the load the same as a regular fork attachment, making sure all the forks are in contact with the load at all times (refer to *Section 5.7* and *Section 5.8*).

3.6-4 Skid Steer Adapter

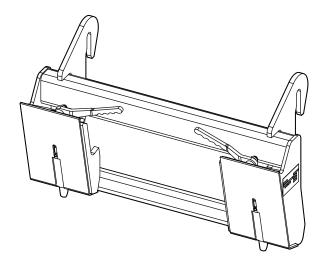


Figure 13 Skid Steer Adapter

This adapter is placed over the quick attach and allows the use of a range of skid steer style attachments.

Installation Procedure

1. Refer to Section 5.12 for details on installing attachments.

Section 3 - Familiarization Optional Attachments

3.6-5 Truss Boom

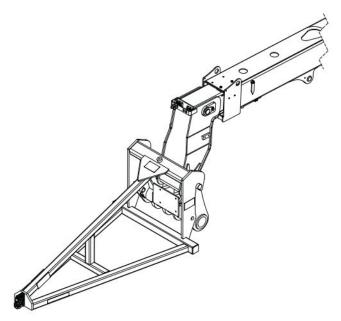


Figure 14 Truss Boom

A truss boom is an attachment with a hook or jib eye load connection. This connection is used for extending the forward reach and lift height of the telehandler at the expense of load capacity.



WARNING

Mounting truss boom changes center of gravity of telehandler. Consult capacity charts specific to attachment before handling loads.

Installation Procedure

1. Remove fork attachment or other attachment from boom and connect truss boom attachment (refer to Section 5.12-1 and Section 5.12-2).

Operation

- 1. Using boom controller, adjust truss boom over the center of the load.
- 2. Attach load to the pintle hook using sufficient chains/cables.
- 3. While helpers guide the load, position load at placement point.

3.6-6 Loader Bucket

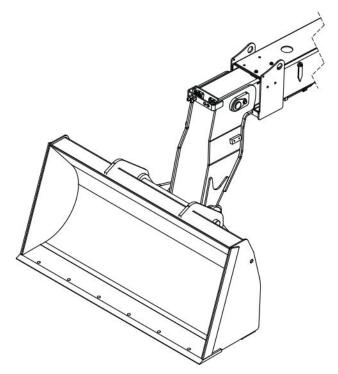


Figure 15 Loader Bucket

A loader bucket has a high back and straight sides for cutting into piles of low density materials. This attachment is used for light material handling such as snow removal or transporting of grains and other loose materials. Material buckets are not meant for excavation as high twisting loads can damage the boom.

Installation Procedure

1. Remove fork attachment or other attachment from boom and connect material bucket (refer to Section 5.12-1 and Section 5.12-2).

Operation

- 1. Raise or lower boom to appropriate height for loading material from stockpile.
- 2. Position telehandler so that it is perpendicular to the stockpile. Drive slowly and smoothly into pile to load bucket.
- 3. Tilt bucket backwards enough to retain the load and back away from pile.
- 4. Drive to the unloading point and keep bucket approximately 4 ft above the ground.
- 5. Tilt bucket forward to dump load.

SKYJACK

| Notes | |
|-------|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Notes | |
|-------|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Section 4 – Pre-operation

4.1 Operator's Responsibility

It is the responsibility of the operator, prior to each work shift, to perform the following:

- 1. Visual and Daily Maintenance Inspections
- Designed to discover any damage of components before the telehandler is put into service.
- Completed before the operator performs the function tests.

WARNING

Failure to locate and repair damage, and discover loose or missing parts may result in an unsafe operating condition.

- 2. Function Tests
- Designed to discover any malfunctions before the telehandler is put into service.

IMPORTANT

The operator must understand and follow the step-by-step instructions to test all telehandler functions.


The operator should make a copy of the Operator's Checklist (see *Section 4.4*) and fill out the visual and daily maintenance inspections and the function tests sections while performing the items outlined in this section.

IMPORTANT

If telehandler is damaged or any unauthorized variation from factory-delivered condition is discovered, telehandler must be tagged and removed from service.

Repairs to the telehandler may only be made by a qualified service technician. After repairs are completed, the operator must perform visual and daily maintenance inspections & function tests again.

Scheduled maintenance inspections shall only be performed by a qualified service technician.

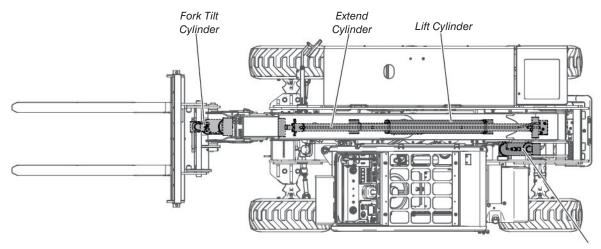

Tilt Compensation Cylinder

4.2 Visual & Daily Maintenance Inspections

Before performing the visual and daily maintenance inspections, ensure that the telehandler is parked on a firm level surface.

Begin the visual and daily maintenance inspections by checking each item in sequence for the conditions listed in this section.



WARNING

To avoid injury, do not operate a telehandler until all malfunctions have been corrected.



WARNING

To avoid possible injury, ensure telehandler power is off during your visual and daily maintenance inspections.



NOTE

While performing visual and daily inspections in different areas, be aware to also inspect all switches, electrical and hydraulic components.

4.2-1 Labels

Refer to the *Section 8 – Labels* in this manual and determine that all labels are in place and are legible.

4.2-2 Electrical

Maintaining the electrical components is essential to good performance and service life of the telehandler.

Ensure proper operation of all gauges.

Inspect the following areas for chafed, corroded and loose wires:

- boom wiring harnesses
- frame wiring harnesses
- cab wiring harnesses

Ensure electrical devices are properly secured with no visible damage. Ensure there are no loose or missing parts.

4.2-3 Hydraulic

Maintaining the hydraulic components is essential to good performance and service life of the telehandler Perform a visual inspection and check for leaks around the following areas:


- hydraulic tank, filter(s), fittings, hoses, pump, and frame surface
- all hydraulic cylinders
- all hydraulic manifolds
- underside of the frame
- ground area under the telehandler

4.2-4 Cylinders

Ensure all cylinders are properly secured and there is no evidence of leakage.

Grease weekly and check pins and bushings to ensure there is no evidence of damage.

SJ519 TH SKYJACK

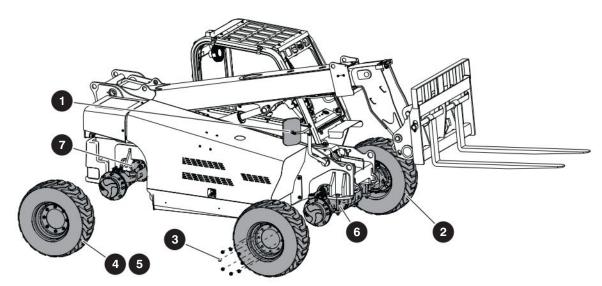

4.2-5 Mirrors

1 Mirrors: Ensure mirrors are properly secured with no visible damage.

4.2-6 Frame

- Wheel/Tire Assembly: Tire and/or wheel failure could result in a telehandler tip-over. Component damage may also result if problems are not discovered and repaired in a timely fashion.
 - Check all tire treads and sidewalls for cuts or cracks that expose the cord plies.
 - Check for punctures, holes and unusual wear.
 - Check each wheel rim for damage and cracked welds.
 - Check each lug nut 3 for proper torque to ensure none are loose. Refer to Section 7.3 for wheel/tire specifications.
- 4 Air-filled Tires: To safeguard maximum stability, achieve optimum telehandler handling and minimize tire wear, it is essential to maintain proper pressure in all air-filled tires. Refer to tire pressure label.
 - Check each tire with an air pressure gauge and add air as needed.

A WARNING

An improperly inflated tire may cause death or serious injury.

Foam-filled Tires: Tire condition can vary significantly depending on telehandler use, job site environment and preventative maintenance

measures. Inspect tires periodically and pay extra attention to the following:

 Check for punctures or holes. Ensure they do not exceed a diameter of 2.54 cm (1 in).

Λ

WARNING

If any tire does not meet the criteria outlined above, remove telehandler from service and replace wheel/tire immediately.



WARNING

Do not use tires other than those specified for this machine. Do not mix different types of tires. Tires other than those specified can adversely affect stability. Failure to operate with matched, approved tires in good condition can result in death or serious injury. Replace tires with exact, Skyjackapproved types only.


O Drive Axles

Ensure drive axles are properly secured, there are no loose or missing parts, all fittings and hoses are properly tightened and there is no evidence of oil leakage.

Steer Cylinder

Ensure steer cylinders are properly secured, there are no loose or missing parts, all fittings and hoses are properly tightened and there is no evidence of hydraulic oil leakage.

SJ519 TH SKY/ACK

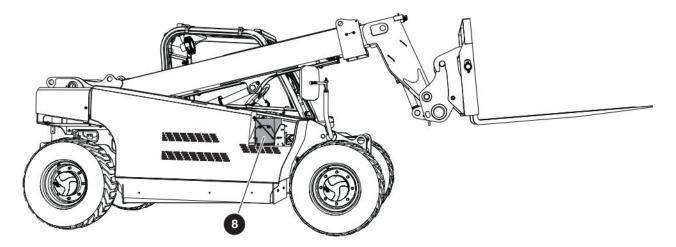

Battery: Proper battery condition is essential to good engine performance and operational safety. Improper fluid levels or damaged cables and connections can result in engine component damage and hazardous conditions.

A

WARNING

Battery acid is extremely corrosive. Wear proper eye and facial protection as well as appropriate protective clothing. If contact occurs, immediately flush with cold water and seek medical attention.

- 1. Check battery case for damage.
- 2. Clean battery terminals and cable ends thoroughly with a terminal cleaning tool or wire brush.
- 3. Ensure all battery connections are tight.
- **4.** If applicable, check battery fluid level. If plates are not covered by at least 13 mm (1/2 in) of solution, add distilled or demineralized water.
- **5.** Replace battery if damaged or incapable of holding a lasting charge.




WARNING

Use original or manufacturer-approved parts and components for the telehandler.

MARNING



Explosion hazard. Keep flames and sparks away. Do not smoke near batteries.

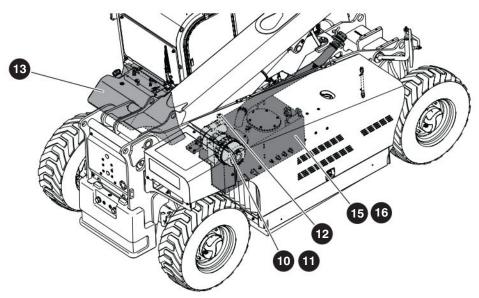

10 Engine Intake Air Filter

- Ensure there are no loose or missing parts and there is no visible damage.
- Ensure air cleaner vacuator valve 11 is free from dirt or dust by squeezing the valve lips.
- Check air cleaner service indicator 2 and replace filter element if needed.

13 Fuel Tank

IMPORTANT

Before using your telehandler ensure there is enough fuel for expected use.

- Ensure fuel filler cap is secure.
- Ensure tank shows no visible damage and no evidence of fuel leakage.
- Fuel Leaks: Failure to detect and correct fuel leaks will result in an unsafe condition. An explosion or fuel fire may cause death or serious injury. Perform a visual inspection around the following areas:
 - hoses and fittings
 - fuel pump
 - fuel filter
 - fuel tank
 - Be sure to follow all local, provincial/territorial/ state and national regulations related to disposing of fluids and soiled rags, cloths, etc.

A WARNING

Engine fuels are combustible. Inspect the telehandler in an open, well-ventilated area away from heaters, sparks and flames. Always have an approved fire extinguisher within easy reach.


15 Hydraulic Oil Tank

- Ensure hydraulic filler cap is secure.
- Ensure tank shows no visible damage and no evidence of hydraulic leakage.

Hydraulic Oil 🗴

- Be sure that the boom is in the lowered and stowed position, and then visually inspect the sight gauge located at the rear of the hydraulic oil tank.
- Add fresh, clean hydraulic oil as required. Refer to Section 7.4 for recommended oil type.
- Be sure to follow all local, provincial/territorial/ state and national regulations related to disposing of fluids and soiled rags, cloths, etc.

SJ519 TH
SKYJACK

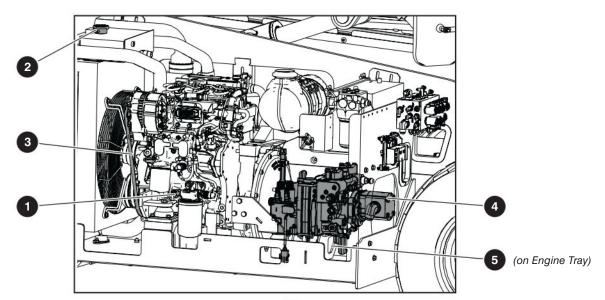

4.2-7 Engine Compartment

 Ensure compartment cover is secure and in proper working order.

A WARNING

Beware of hot engine components.

- Engine Oil Level on Dipstick Maintaining the engine components is essential to good performance and service life of the telehandler.
 - Oil level should be between the L (low) and H (high) marks. Add oil as needed. Refer to Section 7.4 for recommended oil type.
- 2 Engine Coolant

M WARNING

Pressurized fluid present in radiator. Never open radiator cap when hot.

- Check coolant level on radiator.
- Add coolant as required.
- Be sure to follow all local, provincial/territorial/ state and national regulations related to disposing of fluids and soiled rags, cloths, etc.

Belts


Ensure belts are in good working condition and have correct tension. Replace if belts are cracked, frayed, or have chunks of material missing. Refer to service manual for proper replacement procedure.

4 Hydraulic Oil Pump

- Ensure there are no loose or missing parts and there is no visible damage.
- Ensure all bolts are properly tightened.
- Ensure all fittings and hoses are properly tightened and there is no evidence of hydraulic oil leakage.

■ Fuel/Water Separator □

- Ensure there are no loose or missing parts and there is no visible damage.
- Ensure all fittings and hoses are properly tightened and there is no evidence of fuel leaks.
- Drain water by opening water drain plug at bottom of filter. Close tightly after inspection.

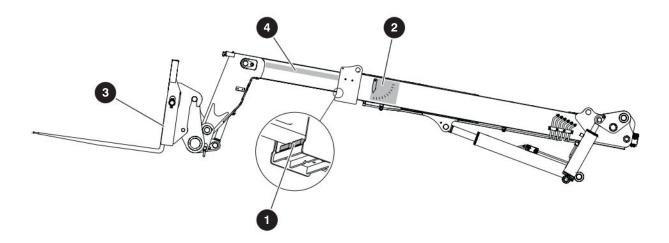

4.2-8 Boom

- Ensure there are no loose or missing parts and there is no visible damage.
- Ensure all bolts and pins are properly tightened.
- Ensure there are no visible cracks in welds or structure and there are no signs of deformation.
- Ensure all hoses are properly tightened and there is no evidence of hydraulic leakage.

Slide Pads

Ensure all bolts are tight, there is no visible damage to the slide pads and that no parts are missing.

2 Boom Angle Indicator

Ensure all bolts are tight, and there is no visible damage and indicator swings freely.

4.2-9 Lifting Attachment

- 3 Ensure attachment is properly positioned and secured. (Refer to Section 5.12).
 - Ensure there are no loose or missing parts and there is no visible damage.

4.2-10 Grease Points

Maintaining properly greased components is essential for good performance and service life of the telehandler. If components are improperly greased, it could result in component damage.

Greased component locations




WARNING

Ensure that there are no personnel or obstructions in maintenance area.

Greasing intervals are based on average telehandler usage. Use of telehandler may vary significantly and greasing frequency must be adjusted to obtain maximum service life.

Refer to the Daily & Weekly Maintenance Chart located inside operator's cab for grease points location and service intervals.

SJ519 TH
SKYJACK

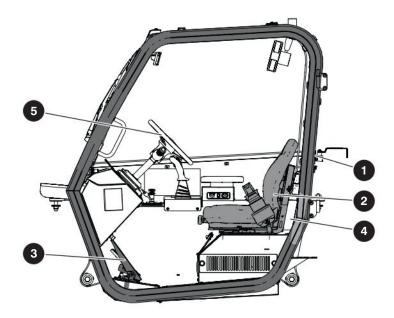

4.2-11 Operator's Cab

- Rollover and Falling Object Protective Structure (ROPS/FOPS)
 - Ensure there is no visible damage.

A WARNING

Do not modify, drill or alter the operator's cab in any way.

2 Seat

- Ensure seat is properly secured with no visible damage.
- Ensure seat belt is working properly with no visible damage.

Pedals


 Ensure brake and accelerator pedals are secure, no loose or missing parts, no visible damage and movements are not obstructed.


Manual

- Check to be sure manual storage box is present and in good condition.
- Ensure a copy of operating manual, and other important documentation are enclosed in manual storage box.
- Ensure manual is legible and in good condition.
- Always return manual to the manual storage box after use.

5 Tilt Steering (If Equiped)

- Ensure steering wheel is properly secured with no visible damage.
- Ensure the tilt steering mechanism is working properly with no visible damage.

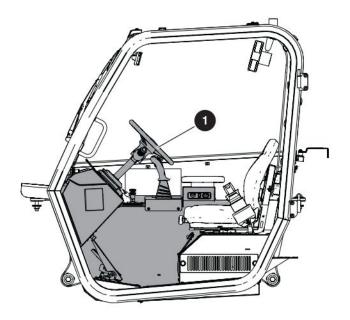

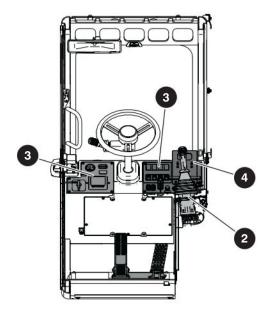

4.2-12 Operator's Cab Controls

A WARNING

Ensure that you maintain three points of contact to mount/dismount the cab.


- Use the steps of telehandler to access operator's cab.
- Ensure door and windows (if equipped) are secure and in proper working order.
- Ensure operator's cab controls 1 (refer to Section 3.3-1) are secured with no visible damage.
- Ensure multi-functional joystick ② (refer to Section 3.3-2) is secured, movements are not obstructed and, with no visible damage.
- Ensure operator's dash controls (refer to Section 3.3-3) 3 are properly secured, returned to their neutral position, with no visible damage.
- Ensure capacity charts 4 are in place and are legible.



WARNING

Do not operate the telehandler if capacity charts are missing or not legible.

SJ519 TH SKYIACK Section 4 - Pre-operation Function Tests

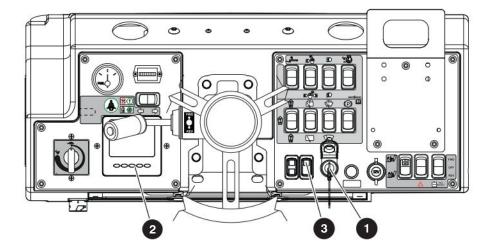

Function Tests 4.3

Function tests are designed to discover any malfunctions before telehandler is put into service. The operator must understand and follow step-bystep instructions to test all telehandler functions.

Prior to performing function tests, be sure to read and understand Section 5 - Operation.

IMPORTANT

Never use a malfunctioning telehandler. If malfunctions are discovered, telehandler must be tagged and placed out of service. Repairs to telehandler may only be made by a qualified service technician. After repairs are completed, the operator must perform visual and daily maintenance inspections & function tests again.



WARNING

Ensure that there are no personnel or obstructions in test area and that there is sufficient room to test all telehandler functions.

4.3-1 Test Starter Operation



WARNING

Ensure that you maintain three points of contact to mount/dismount the cab.

1. Enter cab and close door (if equipped).

WARNING

The seat belt must be worn at all times.

- 2. Sit in the driver's seat and fasten seat belt.
- 3. Using a spotter, adjust the mirrors.
- 4. Ensure parking brake is engaged and shift lever is in neutral. Ensure all controls/switches are in neutral position.
- 5. Insert key into **ignition switch 1** and select on position.
 - Result: Engine data display module 2 and glow plug indicator light 3 should turn on.
- 6. Wait until glow plug indicator light turns off then turn the key to start position until engine starts then return key to on | position.




WARNING

DO NOT over crank the starter. Do not crank for more than 15 seconds. Wait for 15 minutes before attempting to start engine again. If engine fails to start after multiple attempts, contact qualified/ competent repair personnel.

IMPORTANT

If the DEUTZ Engine Display Module displays an error message when engine is running, immediately shut down the telehandler and have it serviced.

Function Tests Section 4 – Pre-operation

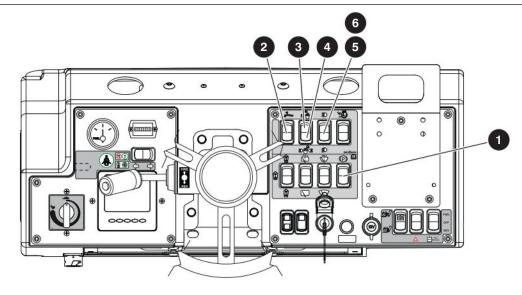

4.3-2 Test Horn

- 1. Push horn on steering wheel.
 - Result: Horn should sound.


4.3-3 Test Lights (If Equipped)

- 1. Use a spotter to check if all lights are working well. The spotter should maintain a safe distance from telehandler.
- 2. Turn parking brake switch 1 to off position.
 - Result: Rear brake lights should turn off.
- 3. Depress service brake pedal.
 - Result: Rear brake lights should turn on.
- **4.** Select **boom lights switch 2** (if equipped) to on position.
 - Result: Boom lights should turn on.

- **5.** Select the **front work lights switch 3** (if equipped) to on position.
 - Result: Front work lights should turn on.
- **6.** Select the **front/rear work lights switch 4** (if equipped) to on position.
 - Result: Front/rear work lights should turn on.
- 7. Select low beam headlights switch 5 to on position.
 - Result: low beam headlights and tail light should turn on.
- **8.** Select **high beam headlights switch 6** to on position.
 - Result: High beam headlights & taillights should turn on.

Function Tests Section 4 - Pre-operation

Multi-functional Joystick

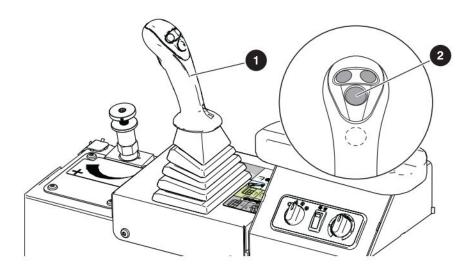

4.3-4 Test Boom Functions

WARNING

Ensure there are no personnel or obstructions in test area and there is sufficient room to test all telehandler functions.

- 1. Ensure the park brake is engaged.
- 2. Raise the boom by moving the joystick 1 backward.
 - Result: Boom should raise and boom angle indicator should be functioning.
- 3. Extend the boom by moving the joystick to the right.
 - Result: Boom should extend and boom extension indicators are visible.
- 4. Retract the boom by moving the joystick to the left.
 - Result: Boom should retract.
- **5.** Lower the boom by moving the joystick forward.
 - Result: Boom should lower.
- 6. Lower the boom until attachment is approximately 0.61 m (2 ft) above the ground.

4.3-5 Test Attachment Functions **Multi-functional Joystick:**

- 1. Tilt attachment forward by pressing and holding the carriage tilt enable button 2 while moving the joystick forward.
 - **Result:** Attachment should tilt forward.
- 2. Tilt attachment backward by pressing and holding the carriage tilt enable button while moving the joystick backward.
 - Result: Attachment should tilt backward.




NOTE

Ensure to test all attachment functions if telehandler is equipped with optional attachments. Refer to Section 3.6 and Section 5.12 for details about each attachment and installation/operation.

> SJ519 TH SKYIACK

Function Tests Section 4 – Pre-operation

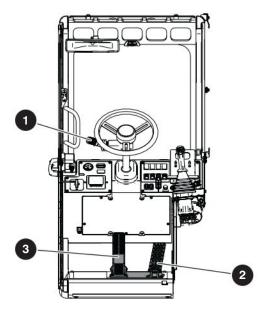

4.3-6 Test Accelerator Pedal


- 1. Ensure parking brake is engaged and direction control lever 1 is in neutral.
- 2. Press accelerator pedal 2 slowly.
 - **Result:** The engine RPM should increase.
- 3. Release the accelerator pedal.
 - Result: The engine RPM should decrease.

4.3-7 Test Reverse Alarm, Driving & Service Brake

- **1.** Ensure park brake is engaged and transmission is in neutral.
- 2. Depress service brake pedal 3 and ensure path of intended motion is clear.
- **3.** Release parking brake.
 - Result: Parking brake indicator light should turn off.

- **4.** Move direction control lever to REV reverse position and release the service brake pedal slowly.
 - **Result:** Telehandler should move backward and reverse alarm should sound.
- 5. Depress service brake pedal slowly.
 - Result: Telehandler should stop.
- **6.** Move direction control lever to FWD and slowly release service brake pedal.
 - Result: Telehandler should slowly move forward.
- 7. Depress service brake pedal slowly.
 - Result: Telehandler should stop.
- **8.** Return direction control lever to neutral position and engage parking brake.

Section 4 - Pre-operation Function Tests

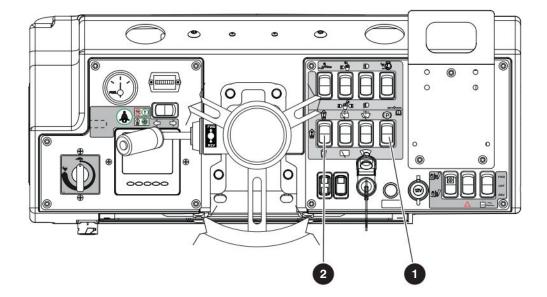

4.3-8 Test Parking Brake

WARNING

The seat belt must be worn at all times.

- **1.** Ensure telehandler is on a firm, level surface.
- 2. Ensure the path of intended travel is clear and area around telehandler is clear of any personnel or obstructions.
- 3. Depress service brake, press the park brake **switch** (P) 1 to off position.
 - Result: Parking brake indicator light should turn off.
- 4. Move direction control lever to FWD and slowly release service brake pedal.
 - Result: Telehandler should roll forward.
- **5.** Press the park brake switch (P) to on position.
 - Result: Parking brake should engage, telehandler should stop immediately (less than two seconds), and parking brake indicator light should illuminate.

4.3-9 Test Steering



CAUTION

Before changing steering modes, bring all four wheels into alignment (i.e., in the straight-ahead position).



WARNING

Before driving on public roads and highways check the alignment of the wheels and drive with FRONT steering only.



WARNING

Do not change steer mode while telehandler is traveling.




NOTE

Avoid steering the wheels while telehandler is stationary.

- 1. Four-wheel Steering (Figure 16)
 - 1. Ensure path of intended motion is clear.
 - 2. Ensure all four wheels are aligned straight ahead.
 - 3. Press the park brake switch (P) to off position and depress service brake pedal.
 - 4. Press the upper portion of the steer mode switch 2 for four-wheel steering.

Function Tests Section 4 – Pre-operation

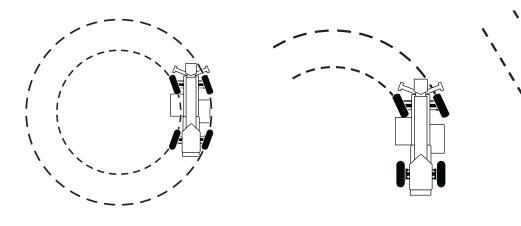

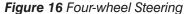 


Figure 17 Front Steering

Figure 18 Crab Steering

- **5.** Turn the steering wheel to the left or right and drive forward.
- Result: Telehandler should move in the chosen direction, producing a turning circle, with front wheels pointing in the opposite direction to the rear wheels.
- **6.** Steer telehandler straight ahead until all four wheels are aligned.
- **7.** Depress service brake pedal until the telehandler stops.

WARNING

Do not use four-wheel steering mode when driving on public roads and highways.

Do not travel at a higher speed when using fourwheel steering mode.


2. Front Steering (Figure 17)


- 1. Place the steer mode switch to the middle position for front steering.
- **2.** Turn steering wheel to the left or right and drive forward.
- Result: Only front wheels of the telehandler should turn in the chosen direction.
- **3.** Steer telehandler straight ahead until all four wheels are aligned.
- **4.** Depress service brake pedal until telehandler stops.

3. Crab Steering (Figure 18)

- Press the lower portion of the steer mode switch to backward for crab steering.
- Turn the steering wheel left or right and drive forward.
- Result: Telehandler should move in chosen direction with both front and rear wheels in the same direction.
- **3.** Steer telehandler straight ahead until all four wheels are aligned.
- **4.** Depress service brake pedal until telehandler stops.
- **5.** Press the park brake switch (P) to on position.

Section 4 – Pre-operation Function Tests

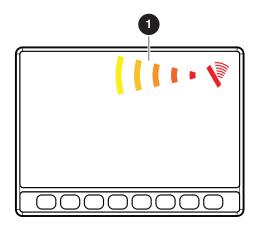

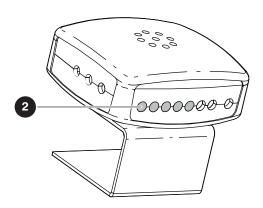

4.3-10 Test Back-up Sensor with Display Buzzer (If Equipped)

- Ensure engine is running and key is in on position | .
- **2.** Press the park brake switch (P) to on position and place direction control lever in reverse.
- **3.** Press and hold service brakes pedal to prevent the telehandler from moving.
- **4.** Press the park brake switch (P) to off position.
 - Result: Range indicator lights 1 on the back-up sensor illuminate and beep if an object is detected behind telehandler.
- **5.** Press the park brake switch (P) to on position.

4.3-11 Test Back-up Sensor/Camera with Monitor (If Equipped)

- Ensure engine is running and key is in on position | .
 - Result: Monitor is active and displays area behind telehandler.
- **2.** Ensure the park brake switch (P) is engaged and transmission is in reverse.
- **3.** Depress and hold service brake pedal. Release parking brake.
 - Result: Range symbols 2 should appear on the monitor and beep if an object is detected behind telehandler.
- **4.** Press the park brake switch (P) to on position.

Operator's Checklist Section 4 - Pre-operation



Operator's Checklist

| Serial Number: | | |
|----------------------|-----------------------|--|
| Model: | Operator's Name | |
| Hourmeter Reading: - | (Printed): | |
| Date: | , | |
| Time: | Operator's Signature: | |

Each item shall be inspected using the appropriate section of the Skyjack operating manual. As each item is inspected, check the appropriate box.

PASS

FAIL

REPAIRED

| N/A | NOT APPLICABLE |
|-----|----------------|
| | |

| | N/A | Р | F | R |
|------------------------------|-------------|-------|-----|---|
| Visual and Daily Main | tenance Ins | pecti | ons | |
| Labels | | | | |
| Electrical | | | | |
| Hydraulic | | | | |
| Cylinders | | | | |
| Mirrors | | | | |
| Frame | | | | |
| Wheel/Tire Assembly | | | | |
| Air-filled Tires | | | | |
| Foam-filled Tires | | | | |
| Drive Axles | | | | |
| Steer Cylinder | | | | |
| Battery | | | | |
| Outriggers | | | | |
| Engine Intake Air Filter | | | | |
| Fuel Tank | | | | |
| Fuel Leaks | | | | |
| DEF Tank | | | | |
| Hydraulic Oil Tank | | | | |
| Hydraulic Oil | | | | |
| Engine Compartment | | | | |
| Engine Oil Level on Dipstick | | | | |
| Engine Coolant | | | | |
| Belts | | | | |
| Hydraulic Pump | | | | |
| Fuel/Water Separator | | | | |
| Transmission | | | | |
| Oil Level on Dipstick | | | | |
| Boom | | | | |
| Boom Angle Switch | | | | |

| | N/A | Р | F | R |
|---|-----|---|---|---|
| Slide Pads | | | | |
| Chains | | | | |
| Boom Angle Indicator | | | | |
| Lifting Attachment | | | | |
| Grease Fittings | | | | |
| Operator's Cab | | | | |
| ROPS/FOPS | | | | |
| Seat | | | | |
| Pedals | | | | |
| Manual Storage Box/Manual | | | | |
| Operator's Cab Controls | | | | |
| Function Tests | 5 | | | |
| Operator's Cab Controls | | | | |
| Test Starter Function | | | | |
| Test Horn | | | | |
| Test Lights (if equipped) | | | | |
| Test Boom Functions | | | | |
| Test Attachment Functions | | | | |
| Test Frame Leveling and Level Indicator | | | | |
| Test Boom Interlock and RAS System | | | | |
| Test Accelerator Pedal | | | | |
| Test Reverse Alarm, Driving and Service Brake | | | | |
| Test Parking Brake | | | | |
| Test Steering | | | | |
| Test Outriggers (if equipped) | | | | |
| Test Back-up Sensor with Display Buzzer (if equipped) | | | | |
| Test Back-up Sensor/Camera with Monitor (if equipped) | | | | |

1235AB

NOTE: Make a copy of this page or visit the Skyjack website at www.skyjack.com for a printable copy.

SJ519 TH 216939ADA 51

| Notes | |
|-------|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Section 5 – Operation

This section provides the necessary information needed to operate the telehandler. Read and completely understand the operating manual and all warnings and instruction labels (refer to Section 8 -Labels) on the telehandler.



WARNING

DO NOT operate this telehandler without proper authorization and training. Doing so could result in death or serious injury.

Before operating this telehandler, perform the following tasks:

- 1. Visual and daily maintenance inspections (see Section 4.2).
- 2. Function tests (see Section 4.3).
- 3. Jobsite inspection (see Section 2.4).
- 4. If, as a result of the risk assessment, the need for rescue planning is identified, a system of communication shall be established between people working on the platform and nominated support personnel trained in the use of ground controls for platform retrieval.



WARNING

An operator should not use any telehandler that:

- does not appear to be working properly.
- has been damaged or appears to have worn or missing parts.
- has alterations or modifications not approved by the manufacturer.
- has safety devices which have been altered or disabled.
- has been tagged or blocked out for non-use or repair.

Failure to avoid these hazards could result in death or serious injury.

WARNING

DO NOT operate telehandler under engine power in an enclosed space. Use only in an open or wellventilated area.

Section 5 – Operation Starting the Engine

5.1 Starting the Engine

WARNING

Ensure that you maintain three points of contact to mount/dismount the cab.

- 1. Enter cab and close door (if equipped).
- 2. Sit in the driver's seat and fasten seat belt.

WARNING

The seat belt must be worn at all times.

- **3.** Ensure parking brake is on and direction control lever in neutral position.
- **4.** To start the engine, turn the ignition switch to on position. Turn the key to start position.

5.2 Driving the Telehandler

5.2-1 Driving on Level Terrain

A WARNING

- Be aware of blind spots when operating the telehandler.
- Ensure that there are no personnel or obstructions in the path of travel, including blind spots.
- When traveling at high rate of speed, use front wheel steering mode.
- Slow the telehandler prior to turning.
- Always look at the direction of travel.
- Travel in reverse only at slow rate of speed.
- Drive only as fast as conditions allow.
- Keep attachment or load low (45.7 to 61 cm/18 to 24 in) to the ground which gives the best visibility and stability.

The telehandler is equipped with a hydrostatic transmission that has a forward and reverse gear.

- Depress service brake pedal then lift and move direction control lever to the desired direction of travel.
- 2. Press the park brake switch (P) to off position.
- **3.** Move the direction control lever to FWD and slowly release service brake pedal.
- **4.** Depress accelerator pedal slowly to increase speed.

- 5. Use lower sped when transporting load, traveling through deep mud, rough terrain, or slopes. Travel at a higher speed during long distances on smooth terrain without a load.
- **6.** Always bring the telehandler to a complete stop before changing the direction of travel.

5.2-2 Driving on Slopes

A WARNING

Driving on slopes or inclines can be dangerous and may result in forklift tip-over or loss of load.

- Avoid excessively steep slopes or unstable surfaces. Do not drive across excessively steep slopes under any circumstances.
- Avoid turning on slopes, if at all possible.
- 1. Keep load low and proceed with caution.
- 2. Reduce travel speed before reaching a slope.
- **3.** Ascend and descend slopes with the **heavy end** of the telehandler pointing up the slope:
 - Without Load: When the telehandler has no load, the rear is considered the heavy end.
 Travel with the attachment pointed downhill.
 - With Load: When the telehandler is carrying a load, the front is considered the heavy end.
 Travel with the attachment pointed uphill.

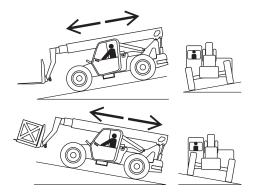


Figure 19 Driving on a Slope

Section 5 - Operation Steering the Telehandler

Steering the Telehandler

Steering is controlled by means of the steering wheel in conjunction with the steer mode switch for the type of steering desired.

5.3-1 Four-wheel Steering

This steer mode is most commonly used on the job site and will give the smallest turn radius available.

WARNING

Do not use four-wheel steering mode when driving on public roads and highways.

Do not travel at a higher speed when using fourwheel steering mode.

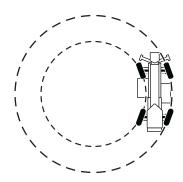


Figure 20 Four-wheel Steering

5.3-2 Front Steering (Two-Wheel)

Two-wheel steer is used during road travel in order to reduce the risk of possible overturn due to oversteering.



NOTE

Loss of electrical power will allow front steering only.

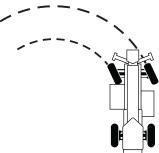


Figure 21 Front Steering

5.3-3 Crab Steering

The crab steer is used for maneuvering into tight

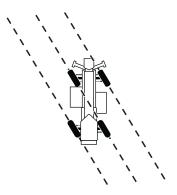


Figure 22 Crab Steering

5.3-4 Adjusting the Tilt Steering Wheel (If **Equipped**)

This option allows the operator to adjust the angle of the steering wheel.



WARNING

Ensure that you maintain three points of contact to mount/dismount the cab.



WARNING

Ensure that the tilt steering wheel is locked into position after adjustment.

- 1. Enter cab and close door (if equipped).
- 2. Sit in the driver's seat and fasten seat belt.



WARNING

The seat belt must be worn at all times.

- 3. Locate the push button in the steering column, and press it to release the tilt steering lock.
- 4. While pressing the push button, adjust the steering at the desired position and release the push button to lock the steering column.

Section 5 - Operation Operating the Boom

Operating the Boom 5.4

5.4-1 Raising or Lowering Boom

WARNING

Ensure that there are no personnel or obstructions and there is sufficient room to perform all telehandler functions.

- 1. To raise the boom, move the joystick backward.
- 2. To lower the boom, move the joystick forward.
- 3. Release the joystick to stop.

5.4-2 Extending or Retracting Boom



WARNING

Ensure that there are no personnel or obstructions and there is sufficient room to perform all telehandler functions.

- 1. To extend the boom, move the joystick to the right. To retract the boom, move the joystick to the left.
- 2. Release the joystick to stop.

Tilting the Attachment 5.5

Multi-functional Joystick:

- 1. Tilt attachment forward by pressing and holding the carriage tilt enable button while moving the joystick forward.
 - Result: Attachment tilts forward.
- 2. Tilt attachment backward by pressing and holding the carriage tilt enable button while moving the joystick backward.
 - Result: Attachment tilts backward.



NOTE

Refer to Section 3.6 for details about optional attachment operation.

Handling Loads 5.6

A WARNING

- Before commencing operation, familiarize yourself with the capacity charts specific to telehandler model and attachment.
- Know the weight of the load and the most extreme height and distance required to pick or place the load.
- Do not lift load on a gradient steeper than 5%.
- Never position the load behind front face of the tires.
- Never drive the telehandler with the boom raised.
- Ensure not to exceed telehandler lift capacity (refer to capacity charts). Exceeding lift capacity could cause tip-over resulting in death or serious injury.
- When performing lift operation where the operator cannot see load at all times, the operator has to be assisted by a spotter using approved hand signals (refer to Section 1.3).
- 1. Drive as close as possible to load pickup/ placement site.
- 2. Place direction control lever into neutral position and press the park brake switch (P) to on
- 3. Use attachment to pickup/place the load. Refer to procedures outlined in Section 3.6 for specific attachment uses.
- 4. If using fork attachment, tilt forks backward to stabilize the load.

SJ519 TH SKYJACK

5.7 Handling Loads at Ground Level

A WARNING

- Handle only loads within the rated capacity as shown on the capacity charts mounted on the telehandler.
- Ensure the capacity chart used corresponds to the attachment fitted to the telehandler.
- Use only manufacturer's approved attachments. The use of non-approved attachments may cause telehandler instability and tip-over, which may result in death or severe injury to operators or bystanders.
- Ensure that the load center for the load is at or within 61 cm (24 in) of forks (refer to Figure 23).
- Use a spotter when possible to assist in handling the load (refer to Section 1.3).

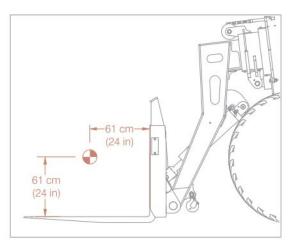


Figure 23 Load Center

5.7-1 Picking up a Load

- Move the direction control lever to neutral and press the park brake switch (P) to on position.
- Ensure the forks are as far apart as possible for the width of the load. This increases the stability of the load and the lift.
- **3.** Approach load slowly with forks straight ahead and perpendicular to the load.
- **4.** Insert forks under the load; making sure not to extend forks past the load so that any loads or equipment behind the load being lifted are not damaged, then raise it 13 cm to 25.4 cm (5 to 10 in).

- 5. Tilt forks backwards and fully retract boom.
- Check telehandler stability before transporting the load.



NOTE

If the forks are longer than the load, move the forks under the load so that the tips of the forks do not extend beyond the load. Lift the load from the surface. Move backward a few centimeters (inches), then lower the load onto the surface and move forward to engage the load against the carriage. Tilt the forks backward just far enough to lift the load from the surface. When the boom is raised from the surface level, the tips of the forks move in an arc.

5.7-2 Transporting a Load

Λ

WARNING

When transporting a load, always travel according to jobsite and weather conditions.

- Travel with caution to the placement site with the load kept as low to the ground as possible and the attachment centered to the sub-carriage. For specific attachment uses, refer to Section 3.6.
- Keep load against carriage and forks tilted backward. This position keeps the load on the forks and provides better forward and side stability.
- Apply brakes smoothly to bring telehandler to a complete stop before pressing the park brake switch (P) to on position.

5.7-3 Placing a Load

- 1. Move the direction control lever to neutral and press the park brake switch (P) to on position.
- **2.** Extend boom to the desired reach and tilt forks forward in a horizontal position.
- Place load in a horizontal position then lower boom until load is completely off the forks. Do not apply downward force with the forks.
- **4.** Free the forks gradually by lowering and retracting the boom alternately.
- When forks are clear of the load, fully retract the boom.
- 6. Return to transport position.

Handling Loads at Variable 5.8 **Heights**

WARNING

- Handle only loads within the rated capacity as shown on the capacity charts mounted on the telehandler.
- Ensure the capacity chart used corresponds to the attachment fitted to the telehandler.
- Use only manufacturer's approved attachments. The use of non-approved attachments may cause telehandler instability and tip-over, which may result in death or severe injury to operators or bystanders.
- Ensure that the load center for the load is at or within 61 cm (24 in) of forks (refer to Figure 23).
- Use a spotter when possible to assist in handling the load (refer to Section 1.3).

5.8-1 Picking up a Load

- 1. Move direction control lever to neutral and press the park brake switch (P) to on position.
- 2. Check that telehandler is level using the level indicator.
- 3. Ensure the forks are as far apart as possible for the width of the load. This increases the stability of the load and the lift.
- **4.** Approach load slowly, raise and extend the boom until the forks are perpendicular to the load.
- 5. Extend and lower the boom to insert the forks under load; making sure not to extend forks past the load so that any loads or equipment behind the load being lifted are not damaged, then raise it 12.7 cm to 25.4 cm (5 to 10 in).
- **6.** Tilt forks backwards. Fully retract the boom then check telehandler stability before transporting the load (refer to Section 5.7-2).

5.8-2 Placing a Load

- 1. Move direction control lever to neutral and press the park brake switch (P) to on position.
- 2. Raise and extend boom until the load is perpendicular over placement point.

- 3. Place the load in a horizontal position and lower boom until the load is completely off the forks. Do not apply downward force with the forks.
- 4. Free the forks gradually by lowering and retracting the boom alternately.
- 5. When forks are clear of the load, fully retract the boom then return to transport position.

Parking and Shutting 5.9 Down the Telehandler



A CAUTION

Operator should observe the following when parking the telehandler.

- Avoid parking on slopes or near excavation, ditches or soft fills. If parking on slopes cannot be avoided, ensure frame is leveled and telehandler is positioned at a right angle across the slope.
- Avoid parking on roads or highways. If it cannot be avoided, ensure to display warning flags during the day and flares or flashing lights at night.
- 1. Position telehandler on a firm and level surface.



WARNING

Engage the park brake switch (P) before exiting the operator's cab.

- 2. Bring telehandler to a full stop.
- 3. With foot on service brake, press the park brake switch (P) to on position.
- 4. Move direction control lever to neutral position.
- 5. Release service brake and ensure machine does not roll.
- 6. Retract boom fully and position attachment on ground.
- 7. Allow engine to idle for 3 to 5 minutes.
- 8. Shut off engine and remove key.



WARNING

Ensure that you maintain three points of contact to mount/dismount the cab.

- 9. Dismount from telehandler.
- **10.** Chock or block wheels to prevent telehandler from rolling.

5.10 DEUTZ Engine Data Display Module

The DEUTZ Display combines a graphic LCD display with five function buttons at the bottom of the screen (see *Figure 24*).

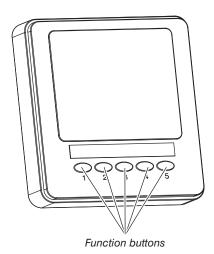


Figure 24 Engine Data Display Module

5.10-1 Function Buttons

- **1.** Pressing any button calls up the main buttons menu.
- 2. The positioning of the symbols above the relevant button allows the button function to be changed. The buttons correspond to the following functions:

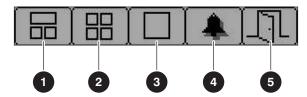 


Figure 25 Main Buttons Menu

- 1 Engine Main Display
- 2 Quad Display
- 3 Graphic Display
- 4 Error Messages
- 5 Exit

5.10-2 Contrast & Illumination Settings

1. Pressing **button 5** calls up the Contrast and Illumination menu when the menu symbols are

- not displayed.
- 2. Adjust illumination using **button 1** for dimming or **button 2** for brightening the illumination.

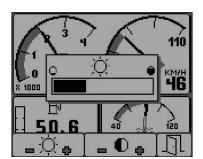


Figure 26 Setting Screen Illumination

Adjust contrast by using button 3 to decrease contrast and button 4 to increase the contrast.

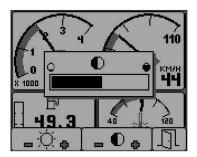


Figure 27 Setting Screen Contrast

5.10-3 Engine Main Display

 To show the engine main display, press any button to display the menu symbols, then press button 1.

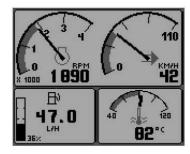


Figure 28 Main Screen

2. The top window shows two scales: engine RPM and coolant level. The bottom left window shows the instantaneous fuel consumption while the right window shows the coolant temperature.

 Pressing button 1 repeatedly will display various parameters such as; fuel consumption, average fuel consumption per route and operating hours per route travelled.

5.10-4 Quad Display

This display gives the user rapid access to four displays, each of which can show four instruments. Information can be shown in either digital or analog format.

1. To select the quad display, press any button to display the menu symbols and then press button 2.





Figure 29 Digital and Analog Quad Display

- **2.** The screens are displayed in sequence as a response to repeated pressing of **button 2**.
- 3. Using the setting mode allows the user to set every instrument shown on the screen in order to be able to display various engine parameters from a long list.
- **4.** The setting mode is activated by pressing *button* 5 when the menu is visible.
- **5.** The menu as shown in the figure below appears in the setting mode.

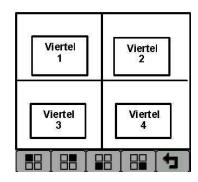


Figure 30 Quad Display Settings

- Pressing button 1 causes the top left display to roam through all available engine parameters. Pressing button 2 roams through the top right display, etc.
- 7. Quit the display by pressing **button 5**.

5.10-5 Graphic Display

The graphic display shows data trends in a large window and functions like an analog data recorder.

1. To access the graphic display, press any button to display the main menu symbols, then press **button 3**.

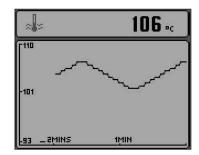


Figure 31 Example of Graphic Display

Showing Coolant Temperature

- The required time grid can be set in the configuration menu from 2, 10 or 30 minutes to 1, 2, 4 or 8 hours.
- The maximum and minimum values of the Y-axis that define the range of the display are automatically adapted to give an optimal overview of the visible data.
- The data to be displayed can be selected by repeatedly pressing button 3 when in graphic display mode.

5.10-6 Error Messages

If a new error message is received, the DEUTZ display will beep and a flashing popup window will open with the latest error messages and details.

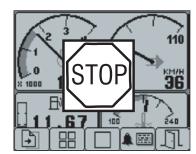


Figure 32 Error Message Popup

 The error list is displayed by pressing any button. The errors that have been read appear in black text on a grey background. New messages that have not been read appear as emphasized grey text on a black background.

SKYJACK

SJ519 TH

216939ADA

- The most recent error is automatically displayed when the error list is called up.
- If the list is longer than the screen section, you can browse through the list using buttons 1 and 2.



Figure 33 Error Message

3. The error list cannot be exited until all alarms have been acknowledged by pressing button 3. The error list display can be viewed at any time by pressing button 4.

5.10-7 Display Configuration

Configuration mode allows the user to set various operating parameters and modes of the DEUTZ Display. This includes setting the units (metric or US customary), measuring range settings or engine service intervals.

- **4.** The configuration menu can be called up by pressing and holding down **button 5** for at least 3 seconds.
- 5. To secure the configuration display, the display prompts you to enter a PIN number before accessing the configuration menu. The default PIN is 1111.

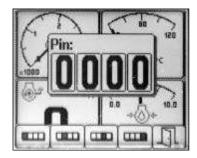


Figure 34 PIN Pop-up

6. Press **buttons 1, 2, 3, 4**, and finally press **button 5** to confirm the information.



Figure 35 PIN Number Entry

- **7.** The configuration menu is displayed once the pin number has been entered.
- Buttons 1 and 2 allow scrolling up and down the menu, while button 4 calls up the highlighted selection.
- **9.** Use **button 5** to exit configuration menu or browse back a level.



NOTE

Refer to the service manual of this telehandler for a list of error codes.

Section 5 - Operation Use of the Capacity Charts

5.11 Use of the Capacity Charts

Capacity charts are located in the operator's cab, and used to determine the maximum load capacity of the telehandler when using different attachment combinations.

Each attachment has its own capacity chart.

To properly use a particular capacity chart, the operator must first determine the following:

- 1. Ensure the capacity chart is for the specific telehandler model and attachment.
- 2. Determine the weight of the load to be lifted.
- 3. Ensure that the load center for the load is at or within the load center specified for the attachment.
- 4. Determine the height where the load is to be picked or
- 5. Determine the reach where the load is to be picked or placed.



NOTE

The user shall consider that changes in load dimension may affect rough terrain forklift truck capacity.

5.11-1 Maximum Load Capacity

The maximum load capacity is determined by finding the intersection of the values for height and reach on the capacity chart. The weight of the load to be lifted must be equal to or less than the determined maximum load capacity.




NOTE

If the intersection occurs on a bold line separating the capacity regions, the smaller of the two capacity values must be used.

WARNING

When handling loads, ensure that boom extension indicator and boom angle indicator remain within previously determined/calculated capacity zone.

Some examples of how to determine the maximum load capacity and safe lifting weights are given in Section 5.11-2.

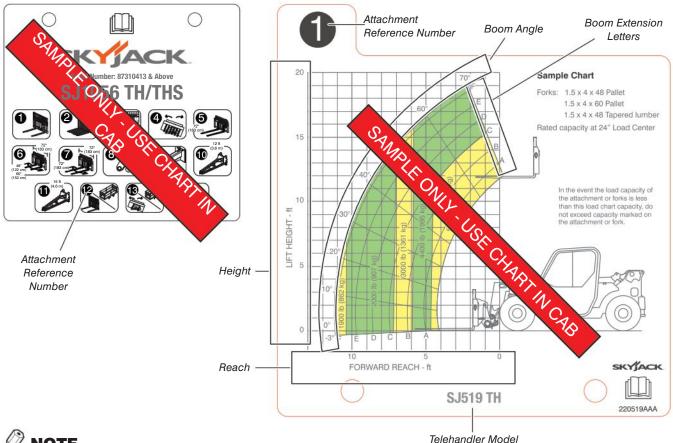




This is a sample capacity chart only! DO NOT use this capacity chart. Use chart inside cab.

Section 5 - Operation Use of the Capacity Charts

5.11-2 Examples on Reading the Capacity Chart

The following scenarios show various conditions the operator may encounter:

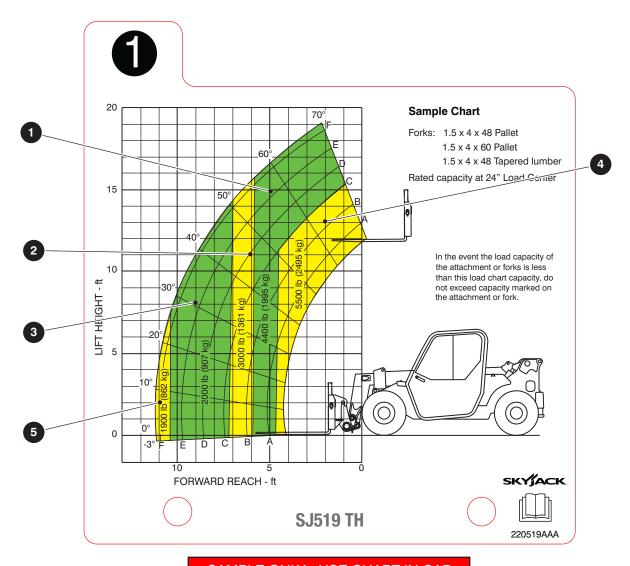

SAMPLE ONLY - USE CHART IN CAB

| Examples | Load Weight | Forward Reach | Lift Height | Boom Angle | Boom | Capacity | OK to Lift |
|----------|---------------------------|-------------------|-------------------|---------------|------|--------------------------|------------|
| 1 | 1,134 kg (2,500 lb) | 1.52 m (5 ft) | 4.57 m (5 ft) | 56° | E | 1,980.8 kg (4,400 lb) | YES |
| 2 | 1,225 kg (2,700 lb) | 1.83 m (6 ft) | 3.35 m (11 ft) | 45° | D | 1,360.8 kg (3,000 lb) | YES |
| 3 | 997.9 kg (2,200 lb) | 2.74 m (9 ft) | 2.43 m (8 ft) | 31° | D | 907.2 kg (2,000 lb) | NO |
| 4 | 2,267.96 kg (5,000 lb) | 0.6 m (2 ft) | 3.96 m (13 ft) | 63° | В | 2,494.75kg (5,500 lb) | YES |
| 5 | 2,041.61 kg (4,500 lb) | 3.35 m (11 ft) | 0.6 m (2 ft) | 5° | E | 861.82 kg (1,900 lb) | NO |

SJ519 TH 216939ADA **63**

5.12 Attachment Installation and Adjustment

Several attachments aside from the common carriage/fork combination are available for use with the telehandler. Installation and operation of other approved attachments are covered in this section.

5.12-1 Installing Attachments Using the **Quick Attach Feature**

1. Ensure the attachment is positioned on level ground.

WARNING

Always ensure transmission is in neutral and the park brake switch (P) is engaged before leaving the cab to prevent the telehandler from rolling. Failure to do so may result in death or serious injury to operators and bystanders.

- 2. Remove the lynch pins from the guick attach pins on both sides of the apron. Allow the quick attach and lynch pins to hang freely from their tethers.
- **3.** Approach the attachment perpendicularly. Position the upper apron bar below the coupling points on the frame of the attachment.
- 4. Raise and tilt the apron backwards to engage the attachment. Lift the attachment clear of the ground. Ensure the quick attach pin holes are aligned.
- 5. Insert the quick attach pins so the lynch pins are oriented on the outside of the apron. Secure quick attach pins with lynch pins.
- 6. If necessary, connect auxiliary hydraulic hoses to the attachment.



WARNING

Visually check that the attachment is correctly coupled and secured to the boom before operating the telehandler.

5.12-2 Removing Attachments Using the **Quick Attach Feature**

1. Position the boom with the attachment just above ground level.

WARNING

Always ensure transmission is in neutral and the park brake switch (P) is engaged before leaving the cab to prevent the telehandler from rolling. Failure to do so may result in death or serious injury to operators and bystanders.

- Disconnect any auxiliary hydraulic hoses.
- 3. Remove the lynch pins then the quick attach pins securing the attachment to the apron. Allow pins to hang from their tethers.
- 4. Lower and tilt the attachment forward until the attachment is resting on the ground.
- 5. Retract the boom to clear the upper apron bar from the frame of the attachment.
- 6. Replace quick attach pins with lynch pins oriented on the outside of the apron. Ensure lynch pins are in place and quick connect pins secured.

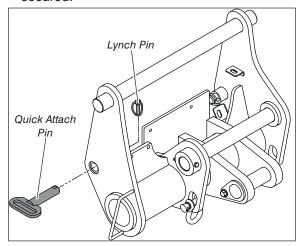


Figure 36 Quick Attach Feature

5.12-3 Installing Attachments Using the Hydraulic Quick Attach Feature (If Equipped)



NOTE

If necessary, connect auxiliary hydraulic hoses of the attachment.

- **1.** Ensure the attachment is positioned on level ground.
- 2. Ensure hydraulic quick attach switch and the quick attach pins on the apron are in the retracted position.
- **3.** Approach the attachment perpendicularly. Position the upper apron bar below the coupling points on the frame of the attachment.
- 4. Raise and tilt the apron backwards to engage the attachment. Lift the attachment clear of the ground. Ensure the quick attach pin holes are aligned.
- **5.** Using the hydraulic quick attach switch, deploy the quick attach pins. The pins extend and secure the attachment to the apron.



WARNING

Always ensure transmission is in neutral and the park brake switch (P) is engaged before leaving the cab to prevent the telehandler from rolling. Failure to do so may result in death or serious injury to operators and bystandards.



WARNING

Visually check that the attachment is correctly coupled and secured to the boom before operating the telehandler.

5.12-4 Removing Attachments Using the Hydraulic Quick Attach Feature (If Equipped)

1. Position the boom with the attachment just above ground level.

A

WARNING

Always ensure transmission is in neutral and the park brake switch (P) is engaged before leaving the cab to prevent the telehandler from rolling. Failure to do so may result in death or serious injury to operators and bystanders.

- 2. Disconnect any auxiliary hydraulic hoses.
- **3.** Using the hydraulic quick attach switch, retract the quick attach pins.
- **4.** Lower and tilt the attachment forward until the attachment is resting on the ground.
- **5.** Retract the boom to clear the upper apron bar from the frame of the attachment.

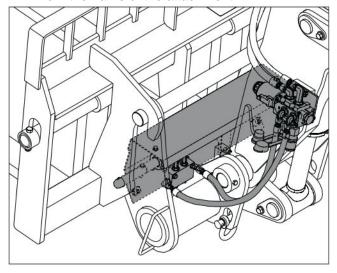


Figure 37 Hydraulic Quick Attach Feature

5.12-5 Adjusting Forks

Adjust the location of both forks manually to suit pallet pocket spacing as follows:

- **1.** Raise the boom until fork eye is approximately shoulder high.
- 2. Tilt the attachment forward until the fork pivots on the bar, and no longer resting on the carriage's bottom rail (see *Figure 38*). This prevents binding on the bar, thus aiding its repositioning.

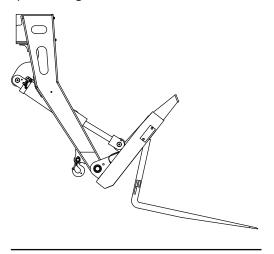


Figure 38 Fork Pivoting on the Bar

A CAUTION

Be careful not to pinch fingers between the fork and any portion of the attachment.

- **3.** Grasping the fork near its eye, push the fork along the bar until it is in the desired position.
- **4.** Before traveling, make sure the forks are centerd with the carriage and are equally spaced.

5.12-6 Changing Forks

The carriage/fork combination is the most frequently used combination. Different loads may require changing forks with different ratings.

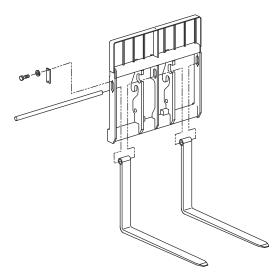


Figure 39 Changing Forks

- Lower the boom with fork contacting the ground until approximately half of the fork float is used up.
- 2. Remove fork bar collars from fork bar.
- **3.** Draw the bar out of the fork eye, being careful that the fork does not fall over, causing possible injury (see *Figure 39*).

A CAUTION

Ensure that the forks are properly secured during the removal and installation process. Failure to do so may result in serious injury.

4. Reverse steps 1 to 3 to install the replacement fork.

Slinging Loads Section 5 - Operation

5.13 Slinging Loads

WARNING

Sling loads from appropriate attachment, hook mounted to the shackle on the jib boom or a tilted fork ONLY.

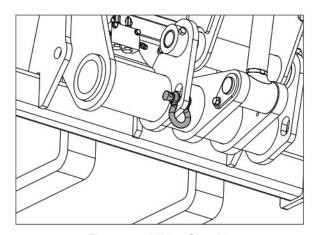


Figure 40 Lifting Shackle

- 1. Slinging of loads must only be performed following a complete risk assessment by a qualified person regarding the rigging and quiding of any such load.
- 2. The rated capacity of the unit and attachment at the sling position must not be exceeded. The sling must be in good repair and restrained from movement at all times.
- 3. Retract the boom as far as is practical during pick and carry operations.
- 4. Perform all boom and traveling operations slowly and smoothly to prevent the load from swinging. Avoid turning if possible.
- 5. Only lift the load vertically and never drag it horizontally.
- 6. Transport the load with the bottom of the load and the mast as low as possible.
- 7. Use guide lines to restrain load swing whenever possible.

5.14 Third-Party Attachments

Skyjack's Variable Reach Rough Terrain Forklifts (RTFLs), are designed to lift and/or handle industrial products by means of various attachments. Skyjack does not certify the design of third-party attachments. Skyjack does not assume any responsibility or liability for damages resulting from the use of third-party attachments on any of its TH/THS RTFLs.

It is permissible to install and utilize third-party attachments provided they do not elevate personnel, and the following conditions are met:



WARNING

Be sure to follow all conditions, regulations and instructions outlined below and all requirements of the local authorities. Failure to do so may result in death or serious injury.

- The combined mass of the attachment and load shall not exceed that of the RTFL load chart for the applicable load center. The rated capacity of the attachment shall not be exceeded.
- In addition to the RTFL operating instructions, all instructions provided by the manufacturer of the attachment must be followed and any additional requirements of local authorities should also be followed.
- Attachments shall be designed and constructed according to ANSI/ITSDF B56.6-2016 and CSA B335, including markings identifying the combined RTFL and attachment weight, and the RTFL capacity with the attachment at maximum elevation and load laterally centered.
- The attachment must be securely attached to the RTFL, per the attachment manufacturer's instructions.
- Prior to using the attachment on each shift, the RTFL operator must visually examine the attachment for structural integrity and perform the daily inspection and function tests on the RTFL. Any equipment defects must be repaired before the attachment or RTFL can be used.

| Notes | |
|-------|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Section 6 – Procedures

6.1 Refueling Procedure

6.1-1 Diesel Fuel

This section provides the operator with procedure on how to refuel telehandler with diesel fuel.

IMPORTANT

Before using your telehandler ensure there is enough fuel for expected use.

- Fill diesel tank with ultra low sulfur diesel only.
- Use extreme caution while refueling telehandler.
- Ensure that engine and all systems are turned off before refueling.
- Refuel the telehandler only in a well ventilated area away from open flame and other sources of ignition, authorized by your employer and supervisor.
- To minimize possible static electricity fires, ensure filler nozzle touches rim of filler opening to aid the dissipation of static electricity.
- Never try to start telehandler if you smell diesel.
- Be sure to follow all local, provincial/ territorial/state and national regulations related to disposing of fluids and soiled rags, cloths, etc.

WARNING

Do not smoke in an area where telehandlers are stored or refueled.

IMPORTANT

The storage and handling of liquid fuels and liquefied petroleum gas fuel used in RTFL shall be in accordance with NFPA 505, NFPA 30 and NFPA 58 as applicable.

- 1. Ensure engine and all systems are turned off.
- 2. Open fuel cap.
- **3.** Carefully pour diesel fuel into the tank, ensuring no spillage occurs.
- 4. Close and secure fuel cap.
- 5. Ensure there are no leaks in fuel system.
- **6.** Wipe up any spilled fuel.
- 7. Dispose of rags in an approved container.

Section 6 – Procedures

Lifting SJ519 TH

6.2 Lifting SJ519 TH

Four lifting points are located on the top of the frame: two at the front and two at the rear.

Follow these guidelines to lift the machine:

- 1. Fully retract and lower boom.
- **2.** Turn ignition switch to the off O position. Remove the key.
- **3.** Block the rear axle by placing wood between the frame and the axle.

WARNING

Only qualified rigger shall operate machinery during lifting.

Use rigging with load capacity sufficient to withstand telehandler weight. Refer to the serial plate of the telehandler for specific weight.

4. Properly adjust rigging to ensure telehandler remains level during lifting. See Center of gravity location.

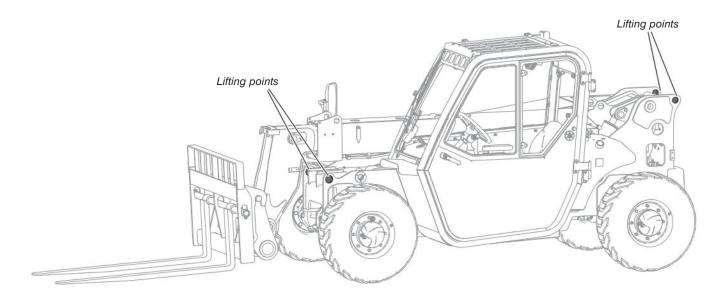


Figure 41 Lifting point locations

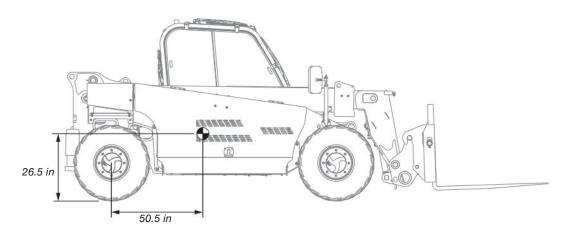


Figure 42 Center of gravity

Loading, Tie-downs and 6.3 **Transporting**

Know all national, state/provincial and local rules which apply to transporting of telehandlers.

Only qualified personnel shall operate machinery during loading and transporting.

Be sure vehicle capacity and loading equipment hoists, chains, straps, etc., are sufficient to withstand maximum telehandler weight.

The transport vehicle must be parked on a level surface and must be secured to prevent rolling while telehandler is being loaded or unloaded.

IMPORTANT

All turbo-engine air cleaner and exhaust must be sealed during transport.

- 1. Ensure telehandler is level prior to loading.
- 2. Fully lower and retract boom.
- 3. Ensure ramps are correctly positioned.

- 4. Using a spotter, carefully drive telehandler onto the transporting vehicle.
- 5. Once telehandler is loaded, apply parking brake and rest the attachment flat on the vehicle.
- **6.** Move all controls to neutral position.
- 7. Turn key switch to off position and remove key before transporting.
- 8. Chock telehandler wheels (if necessary).
- 9. Remove all loose items.
- 10. Anchor down telehandler to transport surface using tie-down points (see Figure 43) and secure the forks to the platform using sufficient straps.

WARNING

Inspect telehandler for loose or unsecured items.

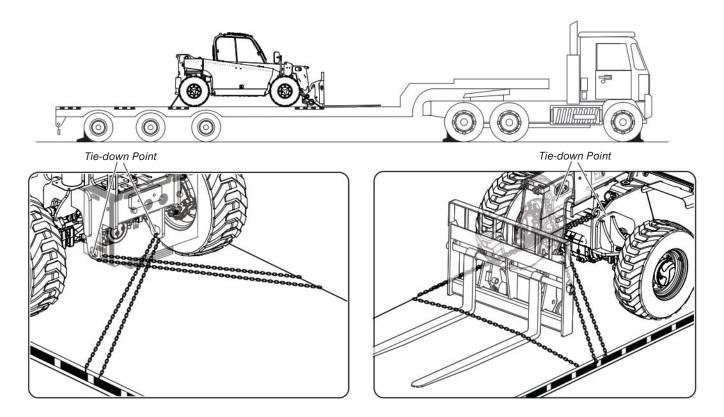


Figure 43 Tie-down points

Section 6 - Procedures Towing the Telehandler

Towing the Telehandler 6.4

IMPORTANT

- Use this procedure only to remove telehandler from mud or other places where it cannot move under its own power. When possible, repair telehandler on site.
- Always chock wheels of the disabled telehandler to prevent accidental movement while preparing for towing. This is especially important if the failure occurs on an incline.
- Before towing, ensure there are no obstructions around or between telehandler and towing vehicle.
- The spotter must maintain a safe distance and must always be visible to the operator inside telehandler's cab.
- Ensure the towing vehicle, chains, tow bar, etc., are suitable for the job. The telehandler weight is stamped on the serial number nameplate (see Section 1.5).
- 1. Lower or raise boom enough so that front lifting points are fully accessible.
- 2. Carefully fasten tow chains to lifting points on the front of the telehandler frame.
- 3. Disconnect the drive shaft from the rear and front axles.
- 4. Remove chocks from wheels.
- 5. Start towing the telehandler.
- 6. Move telehandler to a compact level surface.
- 7. Install dirve shaft in both front and rear axles.
- 8. Apply parking brake.

9. Chock or block wheels to prevent telehandler from rolling.



WARNING

Poor traction can cause telehandler or towing vehicle to slide. Grades can require additional distance to stop the telehandler. Be careful if traction conditions are poor or the machine is on an incline.

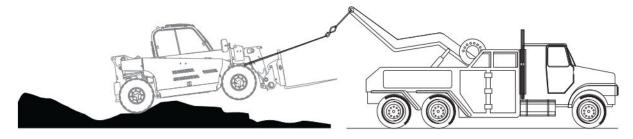


Figure 44 Towing the telehandler from front lifting points

Using the Telehandler as a **Tow Vehicle**

MARNING

Do not exceed rated towing capacity. Failure to do so may result in death or serious injury. See Table **7.2.**

A WARNING

Maximum towing capacity of the telehandler is determined with NO LOAD ON BOOM. Never attempt to operate the boom or lift any load while telehandler is being utilized as a tow vehicle.

6.5-1 Rear Hitch

The **Rear Hitch 1** utilizes the telehandler as a towing vehicle and is located at the rear of the telehandler as shown in Figure 45 below.

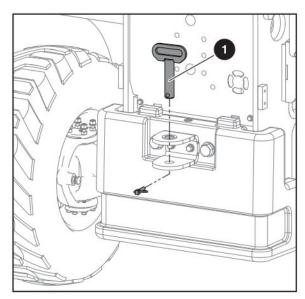


Figure 45 Rear Hitch

| Notes | |
|-------|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Section 7 – Specifications



Table 7.1 Standard and Optional Equipment

| MODEL | SJ519 TH | | | |
|---|-----------|--|--|--|
| Standerd Equipment | | | | |
| 122 cm (48 in) Standard Carriage | * | | | |
| Air Filled Tires | * | | | |
| Diesel Engine | * | | | |
| Four-wheel drive | * | | | |
| Lifting Hook | * | | | |
| Open Operator's Cab | * | | | |
| Operator horn | * | | | |
| Reverse/Backup Alarm | * | | | |
| Spring-applied Hydraulically Released Parking Brake | * | | | |
| Single-Speed Hydrostatic Transmisson | * | | | |
| Three-Mode Steering | * | | | |
| Rear Hitch | * | | | |
| Optional E | Equipment | | | |
| Tilt Steering | * | | | |
| 0.38 m³ (0.50 Cu. Yd.) 167.64 cm (66 in) Bucket Loader Attachment | * | | | |
| 183 cm (6 ft) Truss Boom Attachment | * | | | |
| Skid Steer Adaptor Attachment | * | | | |
| 122 cm (48 in) Side-Tilt Fork Carriage | * | | | |
| 122 cm (48 in) Side Shift Fork Carriage | * | | | |
| Back-up Sensor/ Back-up Camera and Sensor | * | | | |
| Enclosed Operator's Cab | * | | | |
| Enclosed Operator's Cab with A/C | * | | | |
| Fire Extinguisher | * | | | |
| Flashing Beacon | * | | | |
| Foam Filled Tires | * | | | |
| Solid Black Rubber Tires | * | | | |
| Solid Non Marking Tires | * | | | |
| Air / Foam Non Marking Tires | * | | | |
| Air / Foam Wearmaster Tires | * | | | |
| Four-Wheel Fenders | * | | | |
| Positive Air Shut-off System | * | | | |
| Road/Work/Boom Lights | * | | | |
| Speed Limiter Control | * | | | |
| Service Convenience Package | * | | | |
| Partially Enclosed Cab | * | | | |
| Hydraulic Quick Coupler | * | | | |

1691AA

Specifications and Features Section 7 – Specifications

Table 7.2 Specifications and Features

| MODEL | SJ519 TH | | | |
|---|---|--|--|--|
| Standard Engine | | | | |
| Type | Deutz TCD 2.2 L T4 | | | |
| Cylinders | 3 | | | |
| Horsepower @ 2600 RPM | 74 HP | | | |
| Capacity | 2.2 L | | | |
| Torque @ 1600 RPM | 280 N·m (206.5 lbf•ft) | | | |
| Idle Speed* | 1200 rpm | | | |
| Fuel type | Diesel | | | |
| Tra | nsmission | | | |
| Hydrostatic Speed forward / Reverse | Hydrostatic (Variable) | | | |
| Tra | avel Speed | | | |
| Hydrostatic | 23 km/h (14.5 mph) | | | |
| | Electrical | | | |
| Negative ground | 12 Volts | | | |
| Alternator | 120 Amps | | | |
| Battery | 925 CCA | | | |
| Backup Alarm | 107 DBA | | | |
| Di | imensions | | | |
| Wheelbase | 245.11 cm (8 ft 0.5 in) | | | |
| Overall width | 182.88 cm (6 ft) | | | |
| Overall height (stowed) | 193.04 cm (6 ft 4 in) | | | |
| Overall length (stowed, less forks) | 408.94 cm (13 ft 5 in) | | | |
| Ground clearance | 24.13 cm (9.5 in) | | | |
| Maximum weight without attachment | 10,255 lb | | | |
| Turn radius (inside) (4WS) | 134.62 cm (53 in) | | | |
| Turn radius (outside) (4WS) | 317.50 cm (125 in) | | | |
| Boom | | | | |
| Number of sections | 2 | | | |
| Maximum lift height | 5.82 m (19 ft 1 in) | | | |
| Maximum forward reach | 3.38 m (11 ft 1 in) | | | |
| Standard Forks (Standard Tapered Forks) | 4 cm x 10 cm x 122 cm (1.57 in x 3.94 in x 48 in) | | | |
| Carriage rollback @ Maximum Boom Angle (Top) | 88° | | | |
| Carriage forward tilt @ Maximum Boom Angle (Bottom) | 40° | | | |
| Towing Capacity | | | | |
| Towing Weight (MAX) | 2,268 kg (5,000 lb) | | | |
| Towing Tongue Weight (MAX) | 340 kg (750 lb) | | | |

^{*} Engine Idle Speed is measured with 5% droop when in gear.

1692AA

SJ519 TH SKYJACK Section 7 – Specifications

Tire/Wheel Specifications

Table 7.3 Tire/Wheel Specifications

| Model SJ519 TH | | | | | |
|----------------|----------------------|---|------------------|-----------------|-------------------------------|
| | FILL | Size | Pressure | "Ply Rating" | "Wheel Nuts Torque" |
| | AIR | 26.7 cm x 44.5 cm (12.00 in x 16.5 in) | 552 Kpa (80 psi) | | |
| | FOAM | | N/A | | " 372.85 N•m (275 lbf•ft)" |
| BLACKSTONE OTR | NON MARKING AIR | | 552 Kpa (80 psi) | 12 | |
| | NON MARKIING FOAM | | N/A | | |
| WEADMACTED OTD | AIR | | 552 Kpa (80 psi) | | |
| WEARMASTER OTR | FOAM | | N/A | | |
| SOLIDBOSS | BLACK RUBBER | 83.8 cm x 30.5 cm (33 in x 12 in) | N/A | 20 | |
| | NON MARKING | | N/A | | |

1694AA

Recommended Fluids/Lubrications Table 7.4

| Model SJ519 TH | | | |
|------------------------------|-----------|---|--|
| Engine | | | |
| Fuel Type | | Ultra Low Sulfur Diesel (EN 590, ASTM D975) or Biodiesel B20 | |
| Fuel Tank Capacity | | 57 L (15.1 gal) | |
| Recommended Oil Type | | SAE 15W40 | |
| Engine Oil Capacity | | 8.5 L (9 Quart) | |
| Coolant Type (Standard) | | COOLANT-ANTIFREEZE 50/50 PREMIX * | |
| Coolant Type (Cold Weather | r Option) | COOLANT-ANTIFREEZE 60/40 PREMIX * | |
| Coolant Tank Capacity | | 12 L (3.2 gal) | |
| Transmission | | | |
| Hydrostatic | Oil Type | ATF Dexron 3 | |
| Axles | | | |
| Differential | | API GL5 LS | |
| Front Gear Box Capacity | | 0.7 L (0.74 Quart) | |
| Front Central House Capacity | | 4.0 L (4.2 Quart) | |
| Rear Central House Capacity | | | |
| Front Wheel Hub Capacity | | 0.9 + 0.9 L (0.95 + 0.95 Quart) | |
| Rear Wheel Hub Capacity | | 0.9 + 0.9 L (0.95 + 0.95 Quart) | |
| Hydraulic Oil | | | |
| Standard Factory Fill | | ATF Dexron 3 | |
| Туре | | Multipurpose ATF | |
| Hydraulic Tank Capacity | | 70 L (18.5 gal) | |
| Grease Points | | | |
| Туре | | EP2 Grease | |

^{*} Refer to engine manufacturer's manual

1693AA



WARNING

Do not mix hydraulic oil of different types or use oils of types other than those originally supplied with this equipment. Doing so can severely damage hydraulic components. A full hydraulic oil system flush must be performed prior to adding a new type of hydraulic oil. Consult Skyjack service department.

SJ519 TH SKYJACK

| Notes | |
|-------|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Section 8 - Labels

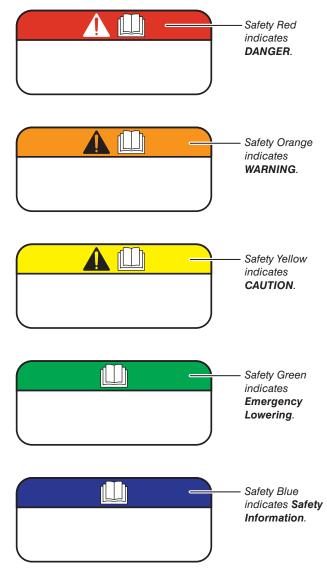


Figure 46 Label legend

8.1 Model SJ519 TH

Operator's Cab Controls

2

Description Label Pictorial

1 Left Side Dash Panel

Turn Signals Switch (if equipped)

- Select **⇔** to signal left.
- Select ⇒ to signal right.

Always wear seat belt (*).

Absolutely no riders (1910).

This vehicle is equipped with a backup alarm sound (1) (20).



2 Direction Control Lever

Transmission gear selector




3 Hydrostatic Pump Speed Control

Adjust knob to control the speed of the hydrostatic pump



Operator's Cab Controls (continued)

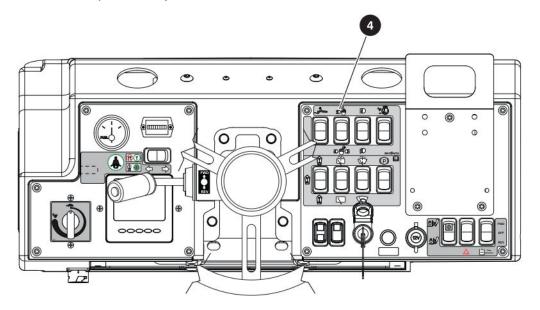

Description Label Pictorial

4 Right Side Dash Panel

Boom Lights Switch (if equipped)

■ Select to turn on boom lights.

Front and Rear Work Lights Switch (if equipped)

- Select not turn on front work lights.
- Select pega to turn on front and rear work lights.

High/Low Headlights and Taillights Switch (if equipped)

- Select to turn on high beam headlights and tail lights.
- Select to turn on low beam headlights and tail lights.

Positive Air Shutoff Switch (if equipped)

Select to trigger the positive air shutoff valve.

Steering Mode Switch

- Select ① for four-wheel steering.
- Select for front steering.
- Select ② for crab steering.

Rear Windshield Washer/Wiper Switch


Select to turn on. Select to turn on wiper.

Front & Top Windshield Wiper Switch


Select to turn on. Select to turn on wiper.

Park Brake Switch

■ Select (P) to engage park brake.

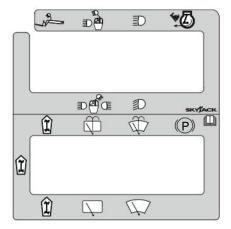

Operator's Cab Controls (continued)

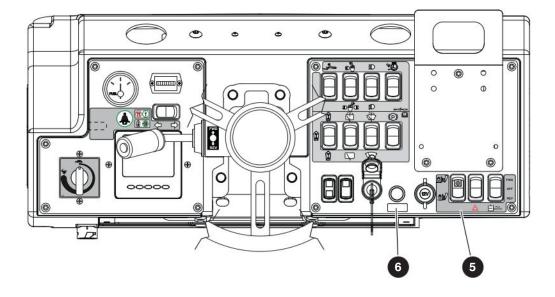

Label Pictorial Description

6 Right Side Dash Panel

Hydraulic Quick Attach Switch (If Equipped)

- Select **b** to activate the hydraulic quick attach function.
- Select 📆 to deactivate the hydraulic quick attach function.

Hazard Warning Light Switch (if equipped) 🛕 .






6 Horn

Horn label



Operator's Cab Controls (continued)

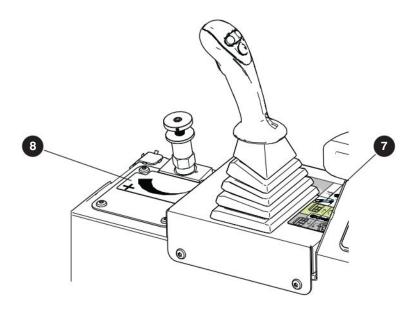


Description Label Pictorial

Multi-functional Joystick

The multi-function single controls boom operation, fork tilt, and auxiliary functions.

- Move joystick forward or backward to raise or lower the boom
- Move joystick right or left to extend or retract the boom.
- Press and hold middle button and move joystick forward to tilt attachment forward.
- Press and hold middle button and move joystick rearward to tilt attachment backward.
- Use optional attachment function switches to control the auxiliary functions of optional attachments.
- Press and hold the trigger button and move joystick left to lock the attachment with the hydraulic quick attach (If Equipped).
- Press and hold the trigger button and move joystick right to unlock the attachment with the hydraulic quick attach (If Equipped).

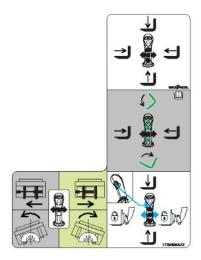


Attachment Hydraulic Flow Control

- Increase the flow of hydraulic fluid through the attachment by turning the Attachment Hydraulic Flow Control clockwise.
- Decrease the flow by turning it counterclockwise.



Operator's Cab

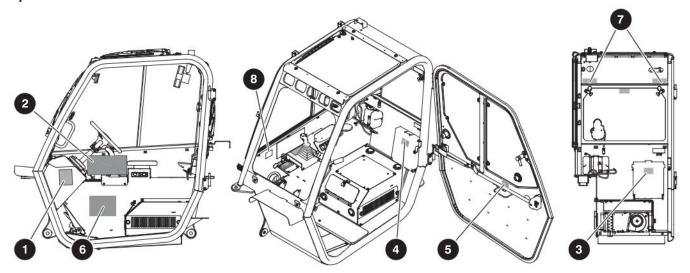

Description Label Pictorial

1 Transportation Reminder

Ensure engine air cleaner, and exhaust are sealed during transportation.



2 Hazard Identification

Read and understand outlined risks associated with this telehandler prior to operation.



3 Windshield Washer Fluid Container

Windshield Washer fluid



Manual Storage Box

Indicates location of operating manual and other important documentation.



5 Open Door (If Equipped)

Squeeze to open cab door.



6 Daily & Weekly Maintenance Chart

Grease points and lubrication intervals chart



Emergency Exit Procedure




Warning - California Proposition 65

Cancer and Reproductive Harmhttps://www.p65warnings.ca.gov/.



Left Side

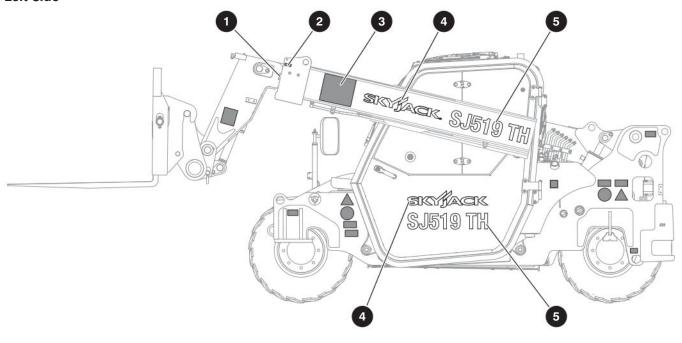

Description Label Pictorial

Extension Letters

Boom extension labels

A iti B iti C iti D

2 Grease

Grease point



3 Rotation Angle

Boom rotation angle label



Skyjack Logo

Skyjack logo - 63.5 cm (25 in) White




Skyjack Logo

Skyjack logo - 63.5 cm (25 in) White

SJ519 TH

Left Side (continued)

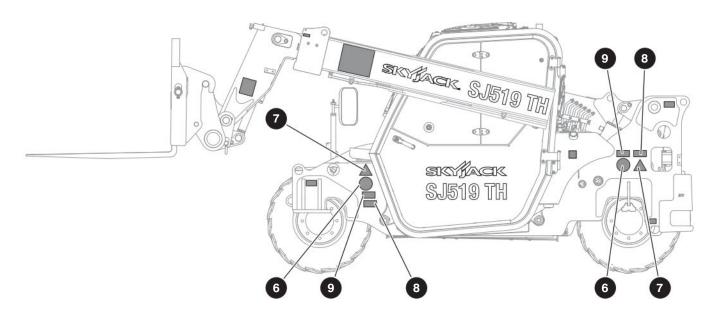

Description Label Pictorial

6 Keep Clear

 
Keep clear.



Body Crushing Hazard
Warning - Body crushing hazard



Wheel Specifications
Refer to manual for wheel type, offset, pressure and torque.

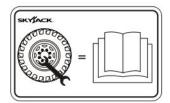


Tire Pressure or Foam Filled Tires*
Indicates rated tire pressure or foam filled tires.

*Tire pressure will vary, may not be as shown.





Left Side (continued)

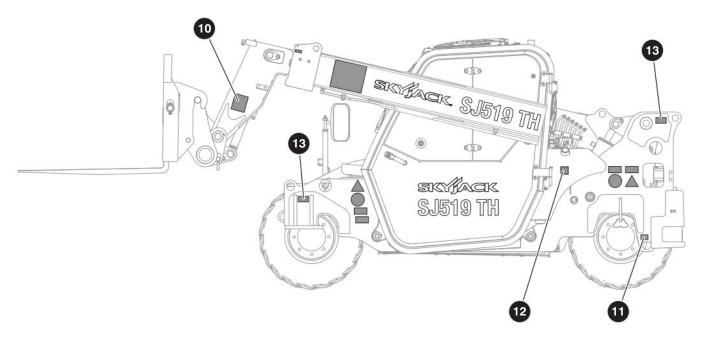

Description Label Pictorial

Unpinned Attachment

Unpinned attachment warning



Tie-down Points

Only use these points for tying down.



12 Ultra-low Sulfur Diesel Fuel Only

Refill fuel tank with ultra-low sulfur diesel fuel only.




Lifting Point / Tie Down


Only use these points for lifting or tying down



Rear

Lifting Shackle on Jib

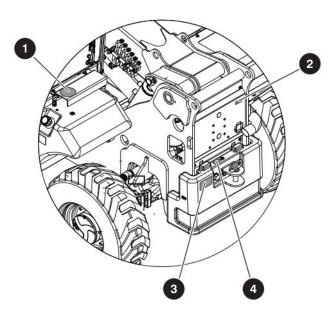

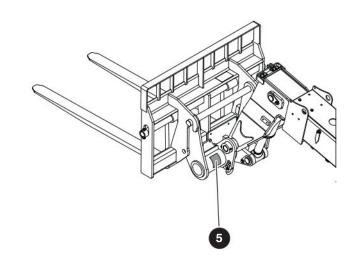

Description Label Pictorial

 
No Smoking

Do not smoke near this location.




2 Grease

Grease point

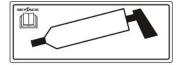

3 Towing Capacity

 Telehandler's maximum towing capacity & tongue weight.

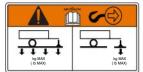

4 Warning - No Step

No step warning




5 Lifting Hook Capacity Warning

Refer to operator's manual and capacity chart inside cab.




Right Side

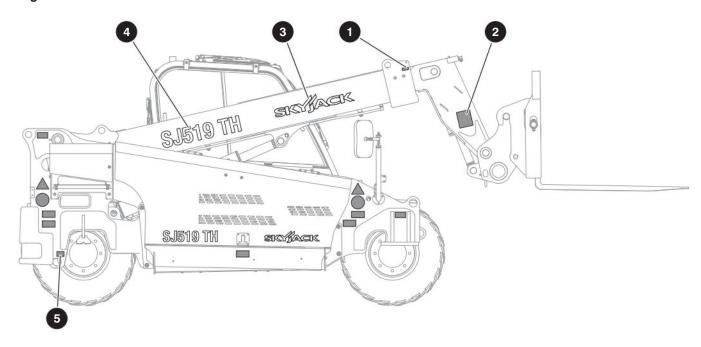

Description Label Pictorial

Grease

 Grease point

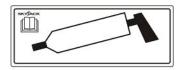

2 Unpinned Attachment

Unpinned attachment warning



Skyjack Logo

Skyjack logo - 63.5 cm (25 in) White



Skyjack Logo

Skyjack logo - 63.5 cm (25 in) White




5 Tie-down Points

Only use these points for tying down.



Right Side (continued)

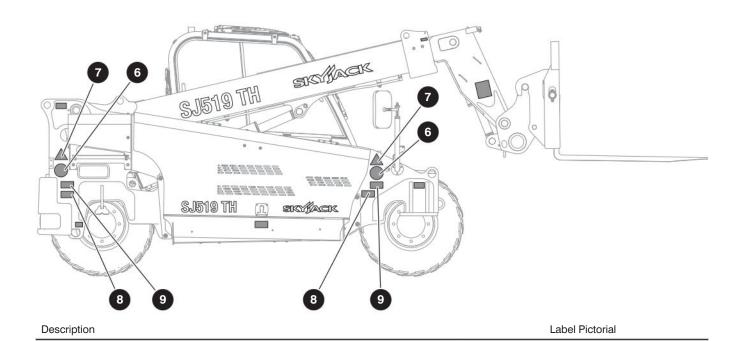

6 Keep Clear

Keep clear.



 
7 Body Crushing Hazard

Warning - Body crushing hazard



8 Wheel Specifications


Refer to manual for wheel type, offset, pressure and torque.

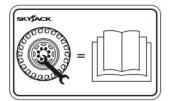

Tire Pressure or Foam Filled Tires*


Indicates rated tire pressure or foam filled tires.

 *Tire pressure will vary, may not be as shown.

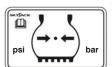



Right Side (continued)

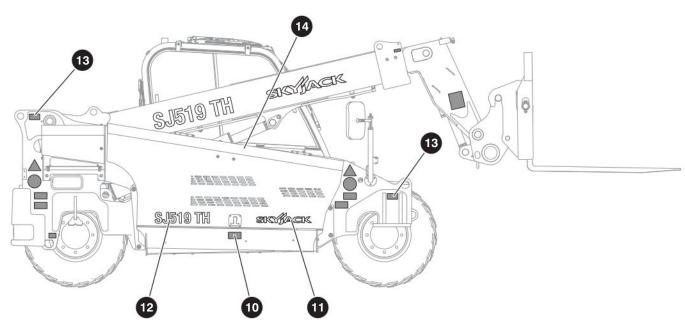

Description Label Pictorial

Crushing Hazard

Warning - Crushing hazard



Skyjack Logo

Skyjack logo - 43.2 cm (17 in) White



Skyjack Logo

Skyjack logo - 43.2 cm (17 in) White



13 Lifting Point / Tie Down


Only use these points for lifting.



4 Hot Surface

Caution - Hot Surface



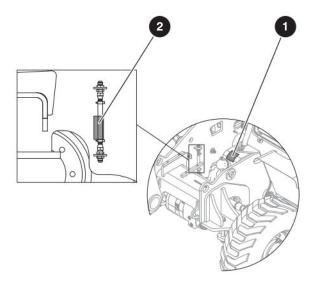

Description Label Pictorial

 
1 Hydraulic Oil ATF Dexron III

Refill Hydraulic oil tank with ATF Dexron III hydraulic oil.




2 Hydraulic Oil Level

Indicates minimum/maximum oil level.

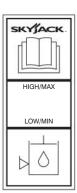

Engine Compartment

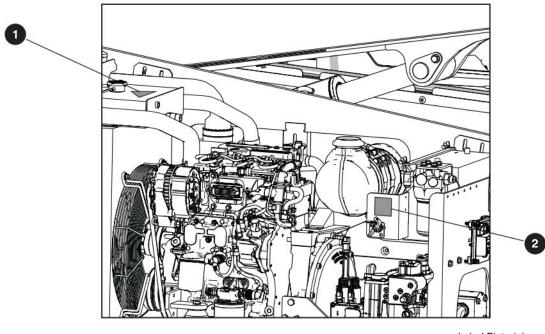

Description Label Pictorial

1 Caution - Coolant Fill Point

Refer to service manual for coolant fill instructions.



2 Main Power Disconnect Switch

For use during maintenance only.

Rotate clockwise to turn on main power, rotate counterclockwise to turn off main power, insert padlock into position.



| Notes | |
|-------|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Section 9 – Unique Skyjack Features

Your Skyjack telehandler may be equipped with the following unique features:



Having equipment with features and functionality that allow you and your customers to do more is a vital part of the utilization equation. Skyjack offers a range of accessory products to further expand a given products adaptability and your power to offer a truly flexible rental choice.



Skyjack's mechanical "axle based" drive system gives positive traction and excellent rough ground "terrain-ability". This is achieved using an automatic or manual (model dependent) locking differential on the rear axle and limited slip differential on the front axle. This means machines can climb grades of up to 30% in the case of Rough Terrain Scissors Lifts, and 50% in the case of Boom Lifts. This industry leading terrain capability means one can use the Skyjack Rough Terrain Scissor Lifts and Boom Lifts in the most challenging of conditions.



Skyjack's TH series telehandlers feature an innovative cab design that allows fleet operators to easily convert between open and enclosed cabs with simple hand tools, providing increased flexibility for fleet movement and fast response to customer demands. Easily sourced flat glass panels with no custom curved profiles and a bolt-on/bolt-off window retention system ensures minimal downtime and incurred costs for repairing damaged glass in the field.



Skyjack's yoke mounted lifting hook is fitted as standard on TH series telehandlers. With capacities that match the maximum lift capability of the telehandler the hook allows the safe under-slinging of loads and avoids the practice of using the forks as an underslung lifting device.



At the heart of every Skyjack machine, proven and simplistic control systems using Skyjack's color coded and numbered wiring system make our machines the easiest to trouble shoot and repair. – Black #14 is for the lift function on a 3219, and it is lift on a 63AJ. Using an analog based control system allows Skyjack AWPs to operate using a simplified system with fewer and less expensive components – less maintenance and lower costs.

SMARIFORQUE

Skyjack's TH series of telehandlers use a low horse power, high torque engine that has been engineered to provide the necessary torque and hydraulic performance found in higher horse power engines. This provides the benefit of lower acquisition costs and the employment of minimal emission controlling modules that otherwise are both expensive and complicated. SMARTORQUE™ means no diesel particulate filter (DPF), no diesel exhaust fluid (DEF) and no other active exhaust after treatment on standard engines for Tier IV Final.

SKYJACK

| Notes | |
|-------|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |



Cancer and Reproductive Harm-https://www.p65warnings.ca.gov/.

